

TABLE OF CONTENTS

Important Notice

HIS 54/55 Series System

Welcome	5
---------	---

Getting Started

1. The Keyboard	9
1.1. How to [POWER] use	
2. SPEC of the connectors	11
2.1. Metal connectors	
3. Screen Overview	12
3.1. Chartplotter page	
3.2. AIS Statusbar	
3.3. Navigation Data Page	
3.4. Highway Page	
3.5. Steering Page	
3.6. GPS Status Page	
4. Databar	18
4.1. Mode	
4.2. Display	
4.3. Position	
5. Cursor	20
5.1. Calling the cursor	
5.2. Moving	
5.3. Removing the cursor	
5.4. Cursor information window	
5.5. Cursor information window shown/hidden	
6. Page	21
6.1. Page mode	
6.2. Modify	
7. Active	23
8. Navigation Data	24
8.1. Type	
8.2. Edit	
9. MircoSD	26
10. Save Userdata	26
10.1. WPT	
10.2. Route	
10.3. Track	
11. Load Usedata	27
11.1. WPT	
11.2. Route	

- 11.3. Track
- 11.4. User Line
- 11.5. User Name

| AIS getting started

1. What is AIS?	29
2. AIS system definitions	29
3. AIS information window	30
4. Quick INFO on AIS target	31
5. AIS Track	32

| AIS operation

1. Display	33
1.1. AIS on/off	
1.2. List	
1.3. Display radius	
1.4. AIS target size	
1.5. Display vessels by color	
1.6. Display vessels by Type	
2. Filter AIS types	36
3. Alarm	36
3.1. CPA Alarm	
3.2. CPA Range	
3.3. TCPA Alarm	
3.4. TCPA Limit	
3.5. Radius Alarm	
3.6. Radius	
3.7. Ignore Vessels if Speed Less	
3.8. Speed less than	
4. Set up AIS outs etc	37
4.1. Mark vessels as lost after	
4.2. Remove lost vessels after	
4.3. AIS Status Bar	
4.4. Own Vessel target	
5. Others	37
5.1. Cursor Box info	
5.2. Messages list	
5.3. Fishing net	
5.4. Popup Window	
5.5. Silence Mode	
5.6. Test View	
6. #Program transponder	39

| Chartplotter getting started

1. GOTO	40
---------	----

1.1. Exit/Store	
2. WPT	41
2.1. List	
2.2. Setting the WPT symbol	
2.3. Setting WPT Color	
2.4. Creating	
2.5. Erasing	
2.6. Erasing all of WPT	
2.7. Moving the WPT	
2.8. Navigating	
2.9. Sorting	
2.10. Editing	
3. Route	47
3.1. List	
3.2. Route detail	
3.3. Creating	
3.4. Edit	
3.5. Detail edit	
3.6. Navigating	
3.7. Erasing	
4. Track	51
4.1. Track on/off	
4.2. Choosing the track	
4.3. Setting the thickness	
4.4. Track Color	
4.5. Erasing	
4.6. Erasing all of track	
5. Measuring the distance and bearing	54

| Chartplotter operation

1. Map Orientation	55
1.1. True Motion	
1.2. North Up/South Up/East Up/West Up	
1.3. Course Up	
1.4. Head Up	
2. Map setup	56
2.1. Map orientation	
2.2. Userdata Display	
2.3. INFO Display	
2.4. Map scale	
2.5. Palette	
2.6. HY-MAP	
3. Vessel	57
3.1. Vessel Icon Size	
3.2. Heading Line	
3.3. Vessel style (Circle/Arrow/Vessel)	
3.4. Orient. Resolution	
4. Alarm	58
4.1. Navigation	

- 4.2. Anchor
- 4.3. Interval

I General operation

1. GPS	61
1.1. Datum	
1.2. Fix Correction	
1.3. COG filtering	
1.4. SOG filtering	
1.5. LAT/LON Unit	
1.6. Receiving Port	
2. Setup	62
2.1. Unit	
2.2. Compass	
2.3. Time & Date	
2.4. Input/Output	
2.5. Buzzer	
2.6. Customizing	
3. Maintenance	66
3.1 Version	
3.2. Simulator	
3.3. Language	
3.4. Initialization	
3.5. Others	

I HIS-54A

General specification
GPS Receiver specification
Chartplotter specification
AIS specification
Standard equipment configuration List
Dimension

I HIS-55A

General specification
GPS Receiver specification
Chartplotter specification
AIS specification
Standard equipment configuration List
Dimension

| Customizing items

| Type of Vessel

| HY-MAP Icon

| Display Unit Installation

Display Unit Location	77
Display Unit Installation	77
Power Connection	79
Care and Cleaning	79

| Reference

NMEA	80
------	----

| GPS Antenna Installation

The installation of the GPS ANT.	81
----------------------------------	----

| GPS

HOW GPS WORKS	83
Position Fixing Accuracy: HDOP	85

Important Notice

Manual Handling	Keep this manual in a safe place where you can access it quickly.
----------------------------	---

The Global Positioning System (GPS) consists of a total 50 GPS satellites that orbit the earth, enabling you to determine your position anywhere in the world, 24 hours a day, if you can receive satellite signals. During actual navigation, carefully compare the position data with all available navigation sources such as Loran C, Decca, other navigators, charts, visual navigation, and others. It is your responsibility to make navigation judgments.

The Electronic Chart :

Only official authorized charts and notices to mariners contain all the information needed for the safety of navigation and, as always remember, the user is responsible for their prudent use.

Pictorials

This manual uses the following symbols for easy understanding safety instructions. Always follow these instructions carefully.

 WARNING	Always follow this safety instruction to prevent death or injury.
 CAUTION	Follow this safety instruction to avoid possible injury or damage to your property. Symbol “△” is a CAUTION or WARNING label indicating the safety instruction.
 WARNING	This symbol is an Electrical Shock WARNING label.
	Symbol is an instruction that you must not violate. (This symbol instructs NOT to disassemble the system components)
	Symbol is an operation instruction that you must follow. (This symbol shows the main power OFF instruction.)



WARNING <For System Operators>

Always follow this instruction to prevent death or personal injury.

	Turn power off During abnormality.	If smoke or a small of burning occurs, a fire or an electrical short circuit may result. Turn the power switch OFF and shut down the power supply immediately. Never try to repair the system yourself. Call for service.
	Do not open Cabinet.	High voltage exists in the instrument. Contact with voltage may cause possible injury or death.
	Do not touch back side of the equipment.	Harmful line voltage is present on back side of the equipment. Never try to touch back side while power is turned on.
	Avoid excessive shock to display unit.	The LCD display module contains a liquid. Do not apply any mechanical shock to the display. If the display broken, liquid may leak and injure your skin and eyes.
	Do not use with poor ventilation.	If you cover this unit or use in an enclosed place, it may malfunction or become damaged as a result of overheating. Use only where there is sufficient ventilation.

Installation Cautions <For service Personnel>

Follow installation instructions to avoid personal injury and system malfunction.

Installation in rigid location.	Mount your HIS 54/55on a rigid frame or base to prevent your unit from working loose.
Use correct Installation materials.	Use the installation materials provided in the standard accessory pack only. If you use hardware of insufficient strength, your system may loosen causing damaged.
Keep away from direct sunlight.	Keep your system out of direct sunlight as it may become damaged by overheating.
Keep away from water.	Take care not to get water on or in your unit as it may be damaged and/or cause an electrical shock.
Keep away from heat source.	Keep your system away from other heat source as it may malfunction, be damaged, or burn.

Use correct power source.	Operate your system within the specified power voltage. An incorrect power supply may cause
----------------------------------	---



Maintenance Cautions<For Maintenance Personnel>

Use the following safety precaution internal inspection.

Discharge capacitors.	High voltage may be retained in the capacitors if the high-tension circuit several minutes after you have turned the power switch off.
Check that power is OFF	To prevent an electrical injury due to erroneous power switching, make sure that the main power supply and the system power switch are both in the off position. Additionally, attach a safety label showing that service is in progress.
Avoid EMI.	Take care not to damage the ESDs (Electrostatic Sensitive Devices) by static electricity from carpet and cloths.
Avoid dust.	Wear a safety mask so as not to breath in dust during inspection or cleaning inside your system instruments.

Operation Notes <For operators>

Observe the following operation notes, otherwise the system failure or deterioration can result. And periodical inspection and maintenance are required for keeping the system in an optimum condition.

Backup important data.	The waypoint and other registered data may become unreadable by unexpected failure. We recommend recording this data separately.
Use correct transducer only.	If you use incorrect transducer, the transmitter circuit may be damaged due to a matching error. Consult is for system information.
Check transducer Connection before power on	Do not turn the power switch ON if the transducer is disconnected or if it is not inserted into the water. If done, the transducer or transmitter circuit may be damaged.
Always clean the transducer	Since transducer performance can drop due to accumulated bottom growth, keep the transducer clean. Never paint transducer surface.

Transducer must be installed by authorized personnel.

Consult us for transducer installation by authorized personnel.



WARNING

This product is designed to assist navigation.
When you are sailing, use the certified chart from the Government or IMO.

HIS 54/55 Series System

Welcome

HIS 54/55 opens a new chapter of performance and integration in vessel navigation system display and management. Whether you are a Cruiser or Sport fisherman or both, HIS 54/55 gives you the information you need.



CAUTION

HIS 54/55 is Color LCD Charting Systems employs the latest in proven technology to provide accurate navigation information. The Plotter functions of HIS 54/55 are totally dependent upon the capability of the navigation source to provide accurate position information. This device is only an aid to navigation. It should be used in conjunction with all other navigation accuracy. For safety, always resolve any uncertainty before continuing navigation.



CAUTION

The performance of LCD displays are degraded by continuous direct exposure to ultraviolet rays. Locate your HIS 54/55 Display away from direct sunlight. When not in use. Keep the display covered.



DISPLAY BREAKAGE WARNING

The LCD display module contains a liquid. If the display is broken and the liquid contacts your skin, wash it off immediately in running water for 15 minutes. If the liquid contacts your eyes, immediately flush your eyes with running water for 15 minutes. Contact a physician if any abnormal symptom is experienced.

HIS 54/55 Series System

Welcome

The Color LCD Fishfinder System opens a new chapter of performance and integration in vessel navigation system display and management. Whether you are a Cruiser or Sport fisherman or both, 650 gives you the information you need.



CAUTION

The HIS 54/55 series employs the latest in proven technology to provide accurate navigation information. The Plotter functions of HIS 54/55 are totally dependent upon the capability of the navigation source to provide accurate position information. This device is only an aid to navigation. It should be used in conjunction with all other navigation accuracy. For safety, always resolve any uncertainty before continuing navigation.

There is no direct relationship between the color of water areas and their depth. The navigator shall always query the area for depth information and use the official paper chart.



CAUTION

The performance of LCD displays is degraded by continuous direct exposure to ultraviolet rays. Locate you're HIS-54/55 Display away from direct sunlight. When not in use. Keep the display covered.

HIS 54/55 Series System



DISPLAY BREAKAGE WARNING

The LCD display module contains a liquid. If the display is broken and the liquid contacts your skin, wash it off immediately in running water for 15 minutes. If the liquid contacts your eyes, immediately flush your eyes with running water for 15 minutes. Contact a physician if any abnormal symptom is experienced.




INDICATION NOTICE

*: It is important or warning notice on front of article

[]: Keyboard.

Getting Started

1. The Keyboard

KEY	Description
	Use this to select menu items, move the on-screen cursor
	Push the end of the everything to confirm a selection or entry
	Change the chart of scale
	Open the menu
	Setting up Using Frequently key function
	Start and stop AIS tracks & Vessel tracks .
	Press to place a waypoint and access the waypoint option.
	Selects AIS menus
	Power "on/off", brightness and day/night mode.

1.1. How to **POWER** use



(Fig.1.1)

1.1.1. Turn on

POWER Switch on.

1.1.2 Turn off

POWER Keep pressing to switch off.

1.1.3. Adjust brightness

POWER Pressing (Fig.1.1) and controlling the brightness with [◀] [▶].


1.1.4. Use day/night mode

POWER Pressing (Fig.1.1) and changing the day and night with [▲][▼].


2. SPEC of the connectors

2.1. Metal connectors

VHF ANT

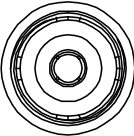


AIS

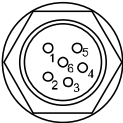


NO	NAME
1	GND
2	NC
3	GND
4	TX +
5	GND
6	NC

NMEA0183

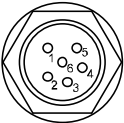

NO	NAME
1	GND
2	TX +
3	GND
4	RX +
5	RX -
6	NC


POWER

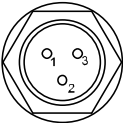

NO	NAME
1	DC +(12V~36V)
2	DC -
3	NC

3. Screen Overview

3.1. Chartplotter Page

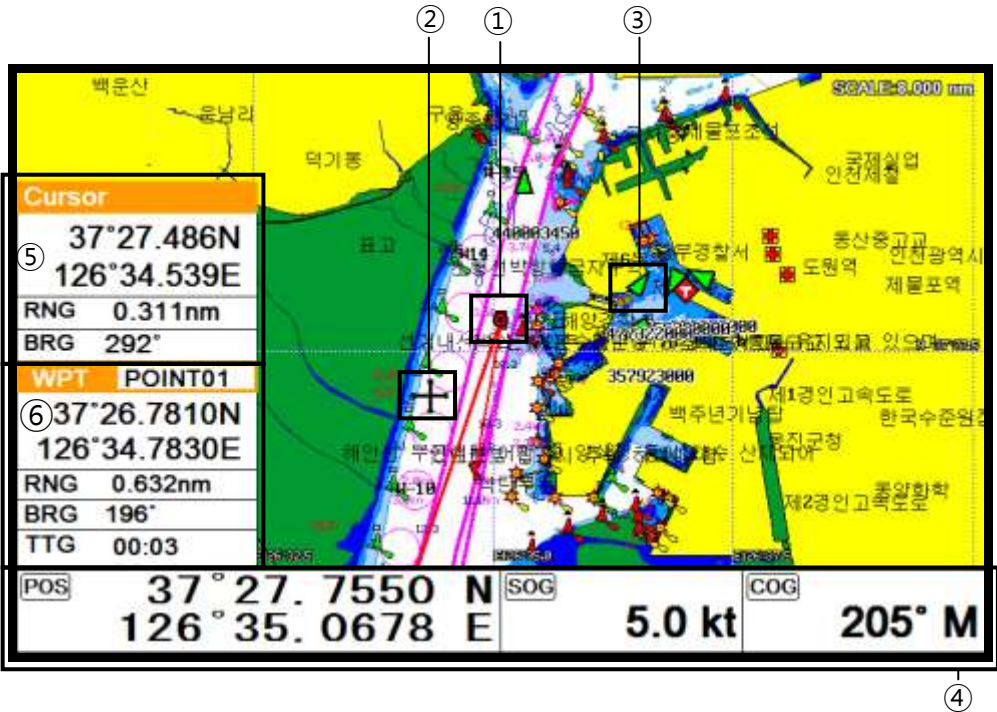


①	Vessel icon	The present position.
②	Cursor	Showing the cursor icon.
③	AIS target	Showing the received AIS target.
④	Databar	Showing various data on the top or bottom.
⑤	Cursor INFO	The information of the cursor.
⑥	WPT INFO	The information of WPT such as LAT/LOT, Range, etc.

3.2. AIS Statusbar

► [AIS]->Setup AIS outs ETC->AIS Statusbar

Showing "AIS ClassB".

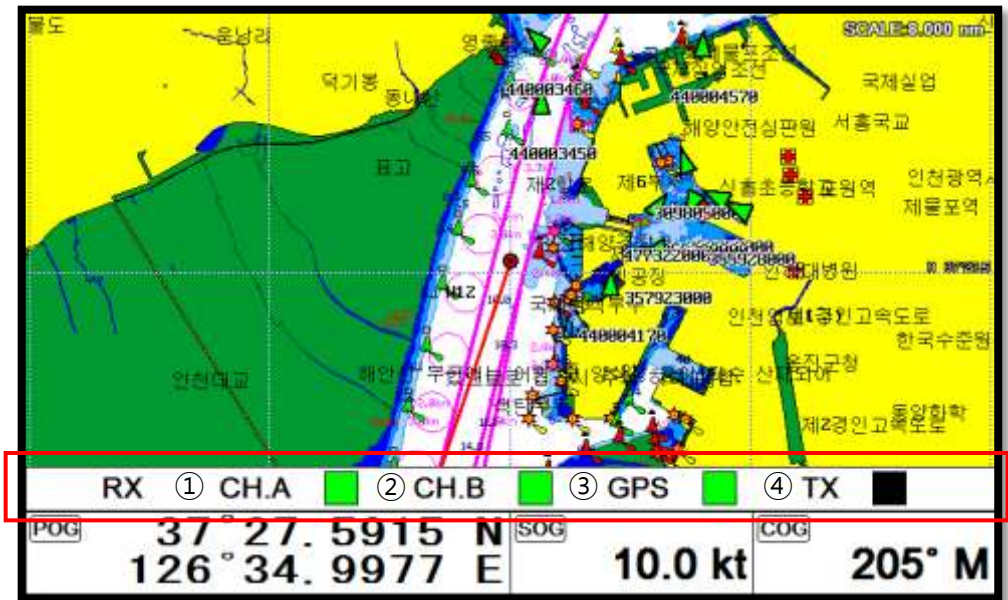

①	RX Channel A	Green when receiving to Channel A.
②	RX Channel B	Green when receiving to Channel B.
③	GPS	Showing the GPS status. (Green: Receiving, Black: Out of service)
④	TX	Green when receiving Class-B.

3.3. Navigation Data Page


3.3.1. Navigation Data Type1

37°25.6046 N 126°34.1458 E			
SOG	COG	WPT	
10.0 kt	205° M	37°26.7810 N 126°34.7830 E	
DEPTH	TEMP	WPT NAME	XTE
27.4 m	24.5 °C	POINT00	L 0.30 nm

3.3.2. Navigation Data Type2


POS		WPT	
37°25.1559 N 126°33.9535 E		37°24.9870 N 126°33.8420 E	
TRACK	WPT INFO	WPT NAME	BRG
OFF 00000	+ 00000	POINT00	207°
DATE	TIME	RNG	TTG
Dec 1 2009	AM 04:10	0.190 nm	00:01
DEPTH	TOT TIME	XTE	VOLTAGE
27.4 m	1:37	R 0.00 nm	12.2V

3.4. Highway Page

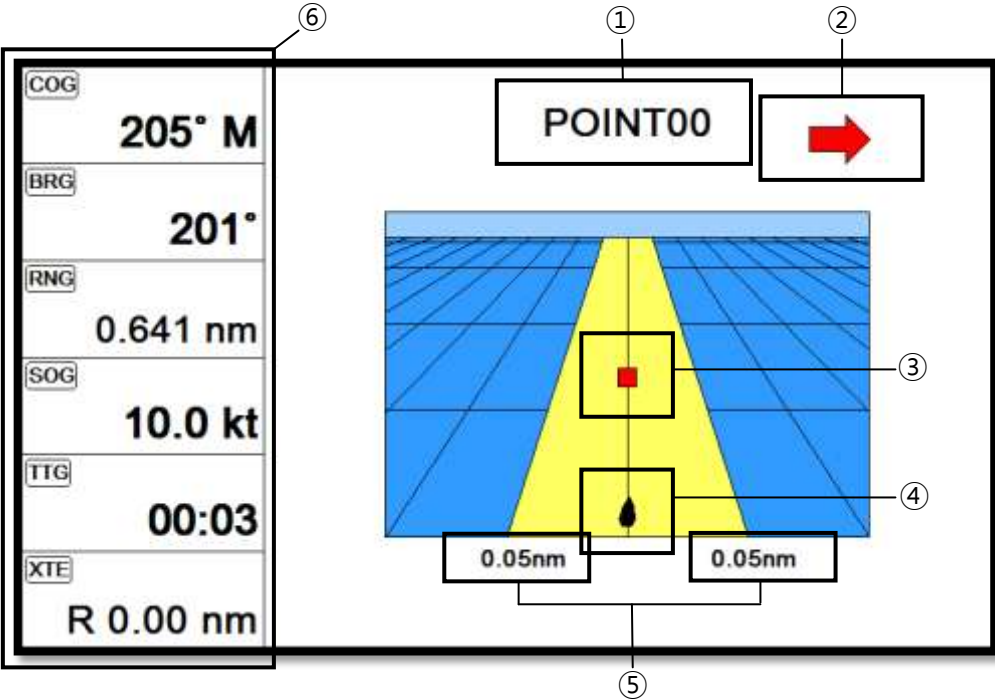


①	WPT name	The current WPT name.
②	Direction of steer	The best direction of the steering.
③	WPT icon	The remaining distance of the WPT.
④	Vessel	The out of the range from the best.
⑤	XTE Range	The range of the XTE alarm.
⑥	Navigation Data	The information of the various data.

3.5. Steering Page

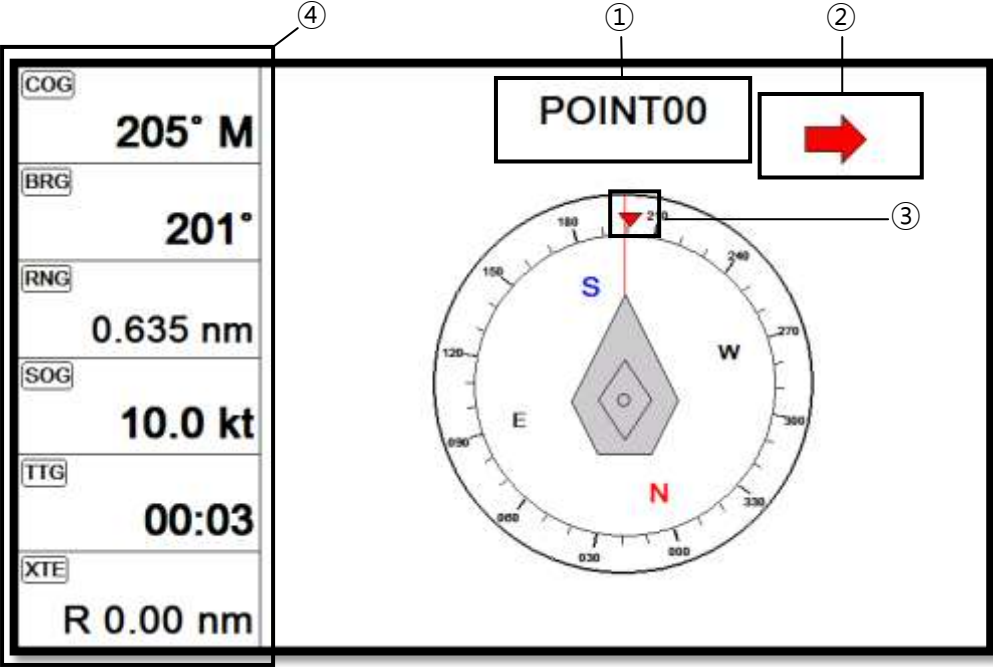

①	WPT name	Name of the WPT.
②	Direction of steer	The best direction of the steering.
③	WPT icon	Showing the WPT and the bearing
④	Navigation Data	Information of the various data.

3.6. GPS Status Page

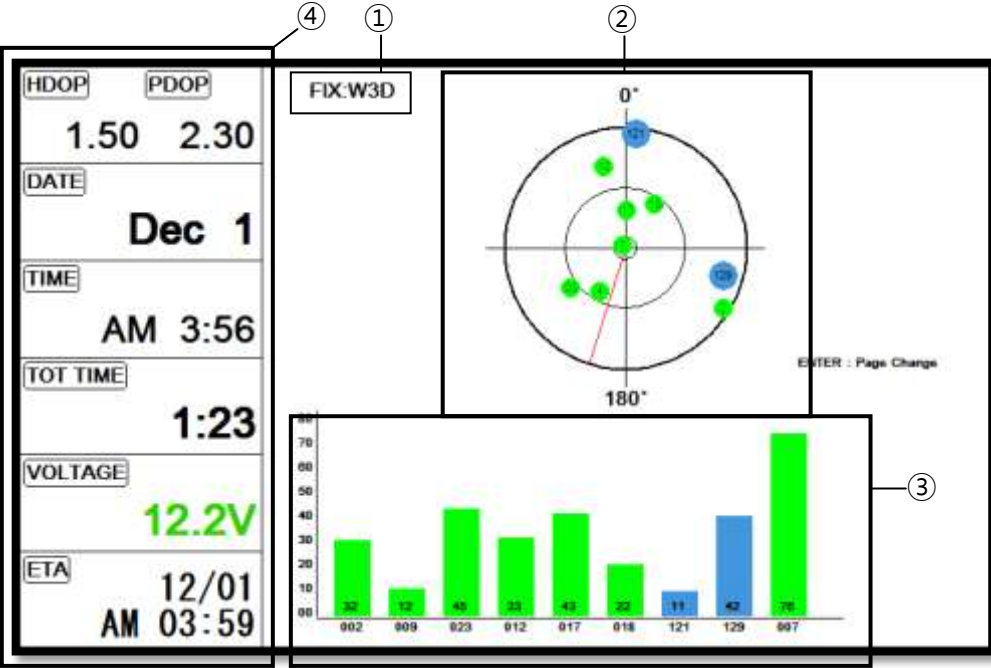

①	Receiver status	The current GPS status.
②	Position of SAT.	Position of the satellites.
③	SNB Graph	Showing the WPT and the bearing.
④	Navigation Data	Information of the various data.

* Color of the GPS status

- Black: Tracked, but no signal
- Blue: Tracked, but not used, Satellite
- Green: Used Satellite
- Light Blue: SBAS Satellite

4. Databar

Showing various data on the top or bottom.



4.1. Mode

Databar has three meanings as below.

4.1.1. Fix Mode 1

Showing the largest LAT/LOT.



4.1.2. Fix Mode 2

Showing the LAT/LOT, SOG, COG and userdata.



4.1.3. Customizing

Showing various data as what the user wants.


► [MENU]->Advance->Setup->Customizing->Databar->Edit



(Fig.1.2.1)


The databar is coming as (Fig.1.2.1), and choose the frame with [◀][▶].

Four frames are available as (Fig 1.2.2).

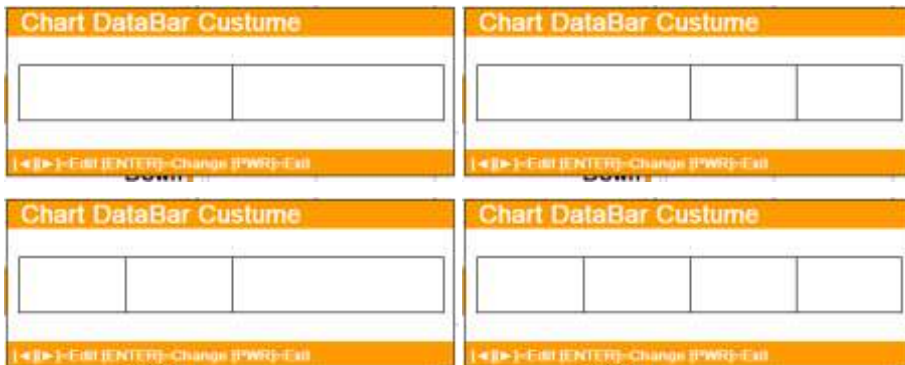

(Fig.1.2.2)

When choosing the frame, setting up in each box as (Fig.1.2.3).

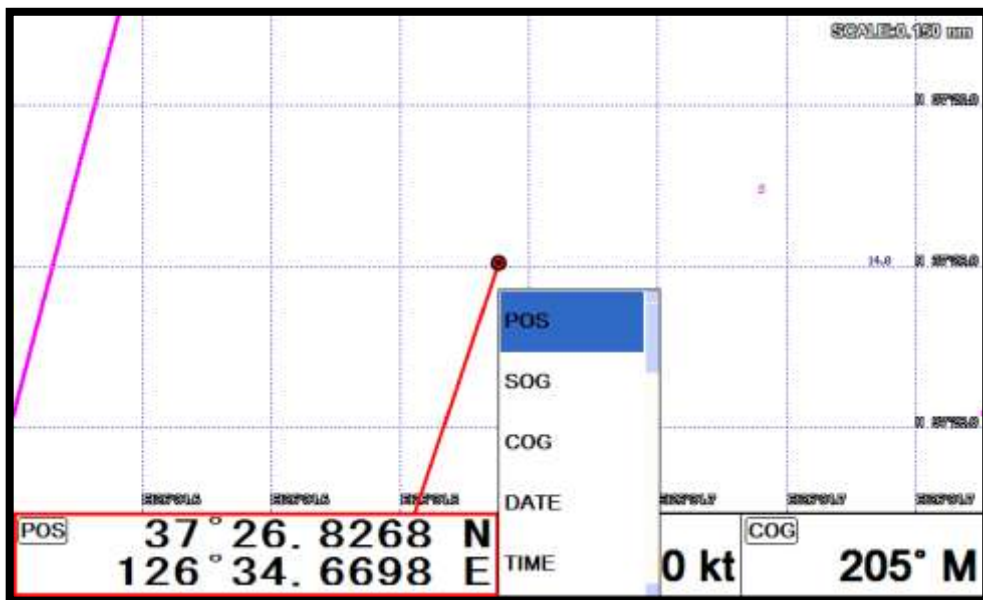

(Fig.1.2.3)

When finishing the set up, press **POWER** to exit.

(*Please, refer "Customizing" for further question.)

4.2. Display

► [MENU]->Advance->Setup->Customizing->Databar->Display

Setting the databar, “Shown/Hidden”.

4.3. Position

► [MENU]->Advance->Setup->Customizing->Databar->Position

Setting the databar position on the top or bottom.

5. Cursor

5.1. Calling the cursor

Press [◀][▶][▼][▲] on the chart, the cursor comes out.

5.2. Moving

Press [◀][▶][▼][▲], the cursor is moving to the direction.

Press [◀][▼] together, the cursor is moving to “↙”.

Press [▶][▼] together, the cursor is moving to “↘”.


Press [◀][▲] together, the cursor is moving to “↖”.

Press [▶][▲] together, the cursor is moving to “↗”.

5.3. Removing the cursor

Press **POWER** to remove the cursor.

5.4. Cursor information window

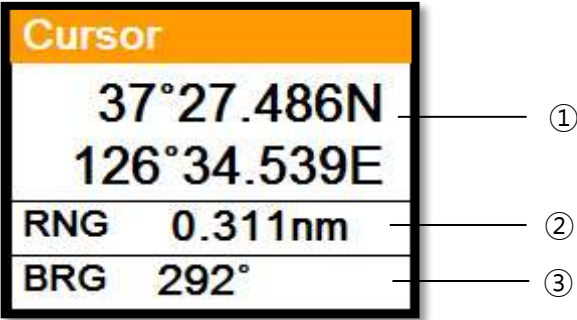

①	Latitude/Longitude	LAT/LON of the cursor.
②	Range	Distance between the cursor and the present position.
③	Bearing	Bearing from the present position to the cursor.

5.5 . Cursor information window shown/hidden

► [MENU]->Advance->Setup->Customizing->INFO window->Cursor


Cursor information window "Shown/Hidden".

6. Page

►[MENU]->[PAGE]Key

Choosing the various pages that set up pages or customized.

Move the red box to choose the page.

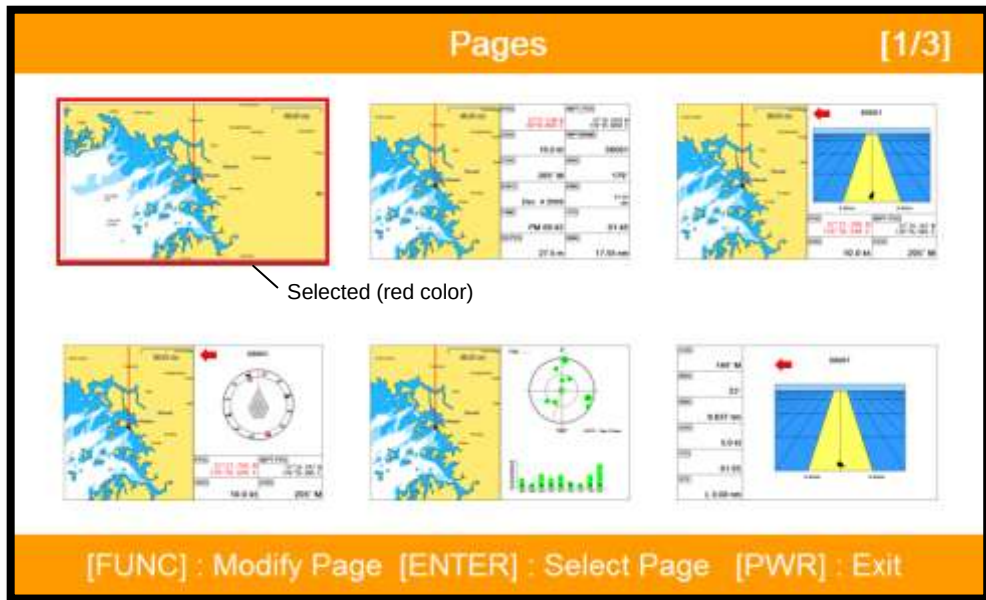

(Fig.1.3)

6.1. Page mode

Two ways to choose the page.

6.1.1. Standard

With seeing the set up page, choosing the page or modifying.

6.1.2. Flip

Showing the set up pages in order.

(* In Flip mode, modifying the order is available.)

6.2. Modify

After choosing the page in (Fig1.3), keep pressing **PAGE** until the window comes out as


(Fig.1.3.1).



(Fig.1.3.1)

Choosing the frame with [◀][▶].

Two frames as (Fig 1.3.2).

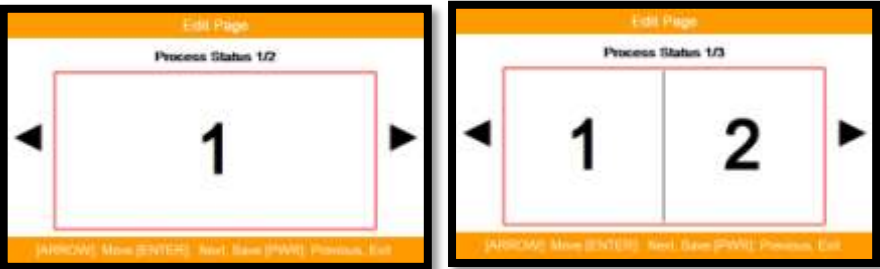

(Fig.1.3.2)

After choosing the box, choose the page as (Fig.1.3.3).




(Fig.1.3.3)

When finishing, press **POWER** to exit.

7. Active

►[MENU]->[ACTIVE]Key

When pressing [ACTIVE], the red box moves to chartplotter or fishfinder.

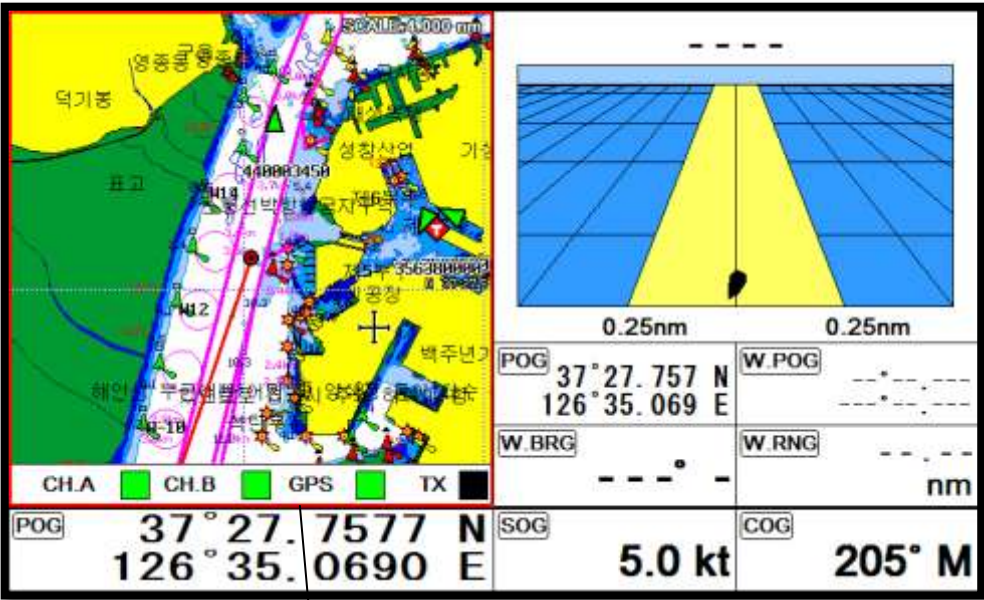

Selected (red color)

8.Navigation Data

Navigation data is available in Navigation data page, Steering page, Highway page as (Fig.1.5).



(Fig.1.4)

8.1. Type

►[MENU]->Advance->Setup->Customizing->Navigation data->Type

Two types of Navigation data page.


8.1.1.Type1

Large LAT/LOT as (Fig.1.5.1).

(*Editing the LAT/LOT is unavailable)

8.1.2. Type2

Various data as (Fig.1.5.2).

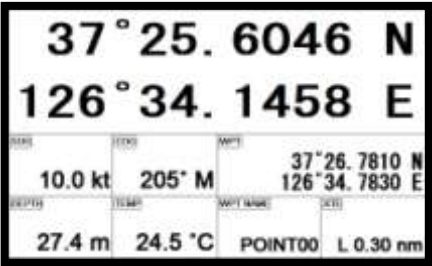

(Fig.1.5.1)



(Fig.1.5.2)


8.2. Edit

(*If there is no navigation data on the page, editing the navigation data is unavailable)

►[MENU]->Advance->Setup->Customizing->Navigation data->Edit

After finishing as (Fig.1.6.3), press **POWER** to exit.


(*Please, refer “Customizing” for further question)

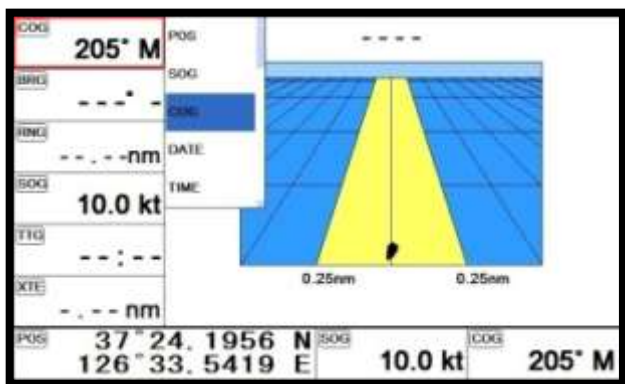

(Fig.1.5.3)

9. MicroSD

Inserting the micro SD as (Fig.1.6).

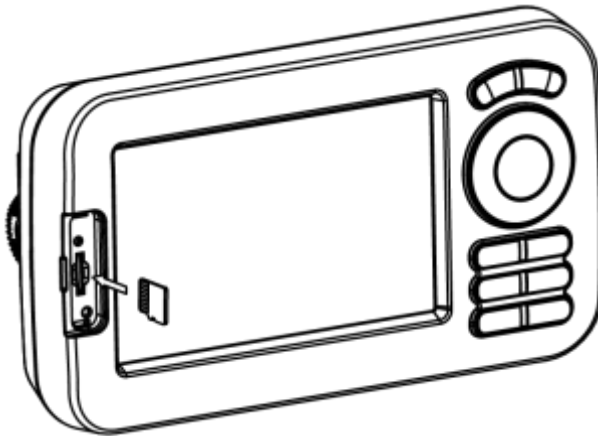

(Fig.1.6)

10. Save Userdata

► [MENU]->Userdata->Save Userdata

Userdata is stored in the external Micro SD. So if you want to save the userdata, a micro SD must be inserted in the slot.

(*Userdata is in “..\HY\UserData”)



10.1 WPT

WPT can be stored in a micro SD.

When storing, give it a name and you will be able to store many WPT' in the micro SD.

10.2. Route

Route can be stored in a micro SD.

When storing, give it a name and you will be able to store many routes in the micro SD.

10.3. Track

Track can be stored in a micro SD.


When storing, give it a name and you will be able to store many tracks in the micro SD.

11. Load Userdata

► [MENU]->Userdata->Load Userdata

Userdata loads from the stored micro SD. If you need to load the userdata, the stored micro SD must be inserted in the slot.

(*Userdata is in “..\HY\UserData\”)

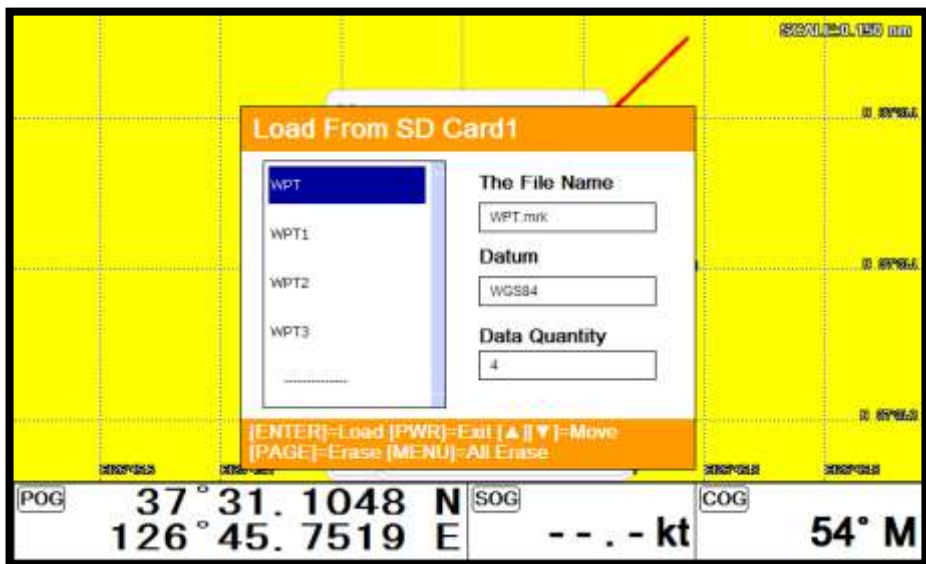

11.1. WPT

WPT loads from the stored micro SD.

All of WPT in the micro SD show on the list. Choose one of them and it will show.

There are two ways to load WPT.

First, showing the stored WPT as well as the existing on the screen. After loading the stored, you will see the window and press **MENU**.

Second, showing only stored WPT. After loading the stored, press [ENTER].

11.2. Route

Route loads from the stored micro SD.

All of route in the micro SD show on the list. Choose one of them and it will show.

11.3.Track

Track loads from the stored micro SD.

All of track in the micro SD show on the list. Choose one of them and it will show.

11.4. User Line

User line loads from the stored micro SD.

All of user line in the micro SD show on the list. Choose one of them and it will show.

11.5. User Name

User name loads from the stored micro SD.

All of user name in the micro SD show on the list. Choose one of them and it will show.

AIS getting started

1. What is AIS?

AIS is an Automatic Identification System. It has been introduced to improve the safety of navigation by assisting in the efficient operation of ship to ship, ship reporting and VTS applications. The system should enable operators to obtain information from the ship automatically, requiring a minimum of involvement of ship's personnel, and should have a high level of availability.

Connecting to the chart plotter an AIS receiver, vessels with AIS transponder within VHF range are displayed on screen giving the skipper or navigator a visual interpretation of the data of nearby vessels. This improves safety, and specifically for collision avoidance reasons.


2. AIS system definitions

CPA	Closest Point of Approach is the closest distance that will be achieved between your vessel and the tracked target, based on your vessel's speed and direction and the target's speed and direction.
TCPA	Time to Closest Point of Approach is the time remaining until the CPA will occur.
Name	Name of ship, 20 characters.
MMSI	Maritime Mobile Service Identity.
MMSI number	A unique 9 digit number that is assigned to DSC radio station. It primarily registers the boat information in the U.S. Coast Guard's national distress database for use in emergency situations.
 Target	It is a vessel equipped with AIS. Information about the targets is being received by AIS Receiver and displayed on the screen.
 Active Target	Target located within the Activation Range. Active target is represented by oriented triangle with COG and Heading vectors. Rate of turn may also be displayed.
 Selected Target	Target selected with cursor. Can view AIS information window.
Dangerous	Target detected by CPA or TCPA Alarm. Dangerous target is Active Target by definition. For better visibility Dangerous Target symbol is charged from basic color

Target 	to red color.
Sleeping Target 	Target located outside the Activation Range. Sleeping target is represented by a small oriented triangle.
Lost Target 	When the AIS info is not received from that vessel. The presentation will be marked X on the target.

3. AIS information window

Press [ENTER] key on Target which wants to see. It shows Information of “AIS INFO” window.

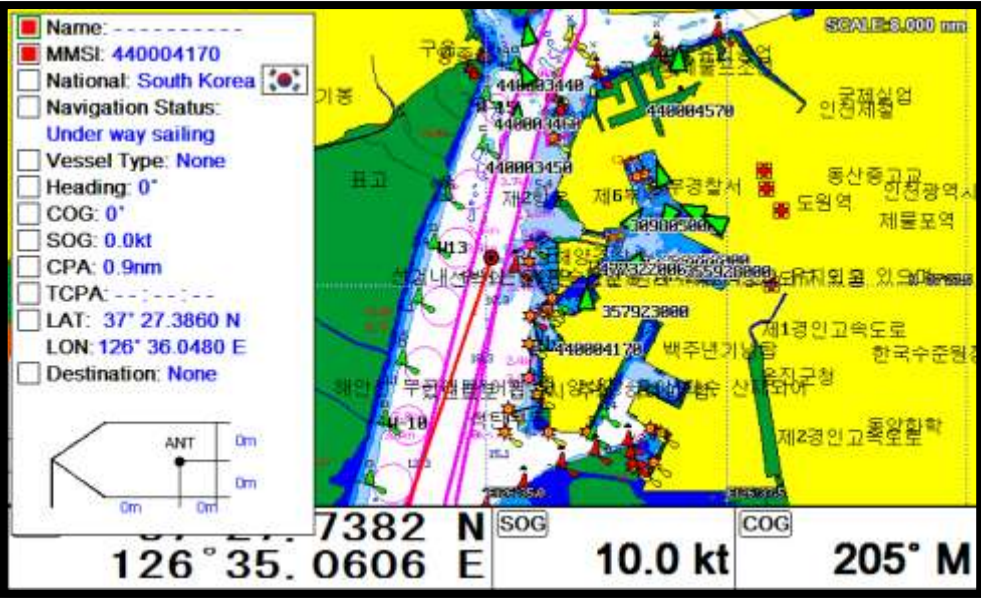


(Fig.2.1)

4. Quick INFO on AIS target

Choose “AIS information window” on (Fig.2.1) and AIS data shows under the AIS target.

(*Up to four kinds of data is available to choose in Quick INFO)

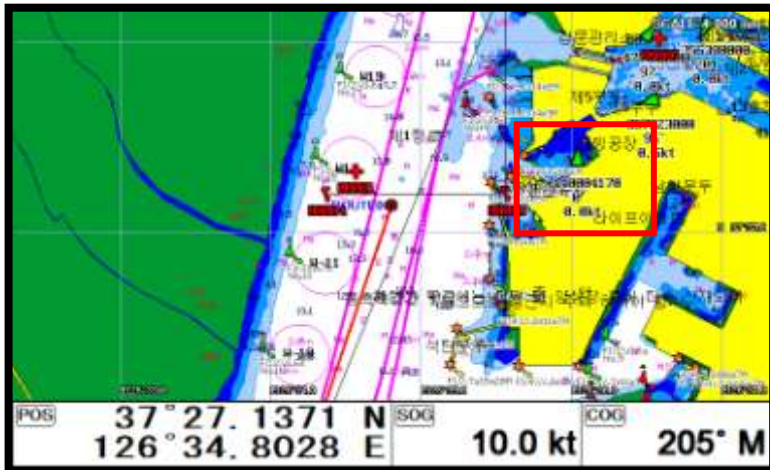


5. AIS Track

Monitoring with AIS target tracking. (Up to five)

Call the cursor and move it on the AIS target as (Fig.2.2) and press **TRACK** on choose the AIS target

on the list as (Fig.2.3) and press **TRACK** .

(*The tracking AIS target is in yellow and on the top of the AIS list)

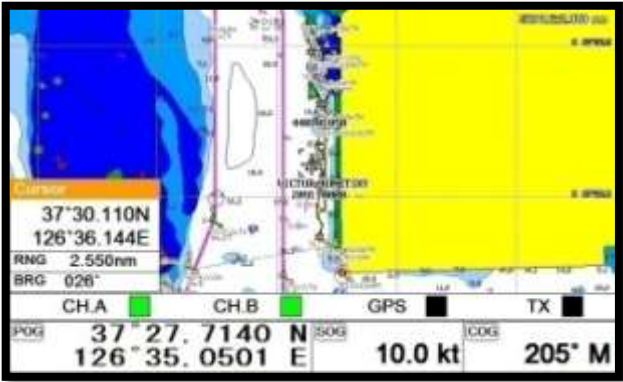

(Fig.2.2)

AIS LIST				PAGE 1/2
Name	MMSI	Range	BRG	
VICTOR KONETSKY	209110000	3.0nm	19°	
—	256056000	2.0nm	65°	
—	440400150	3.3nm	39°	
—	440003450	1.7nm	12°	
—	356380000	1.8nm	63°	
—	440101050	3.2nm	18°	
—	440002300	2.0nm	181°	
—	357923000	1.4nm	72°	
[ENTER]=Detail [MENU]=Sort [FUNC]=Data [TRACK]=Track				

(Fig.2.3)

II AIS operation

►[AIS]

1. Display

1.1. AIS On/Off

Turns the display of AIS targets overlay on the screen On or Off.

(☞ The default setting is On.)

1.2. List

Selected(blue color)

AIS LIST				PAGE [1/2]
① Name	② MMSI	③ Range	④ BRG	
-----	256056000	2.3nm	59'	
-----	440400150	3.6nm	38'	
-----	440003450	2.0nm	13'	
-----	356380000	2.1nm	56'	
-----	440101050	3.6nm	18'	
VICTOR KONETSKY	209110000	3.3nm	19'	
-----	440002300	1.7nm	178'	
-----	357923000	1.6nm	62'	
[ENTER]=Detail [MENU]=Sort [GOTO]=Goto				

(Fig.2.4)

①	Name	Name of the AIS target
②	MMSI	MMSI of the AIS target
③	Range	Distance between the AIS target and the present position
④	BRG	Bearing between the AIS target and the present position

1.2.1 Detail

Choose the AIS target and press [ENTER].

VICTOR KONETSKY

MMSI

209110000

IMO

C4UK2

Latitude/Longitude

37° 30.1060 N
126° 36.1530 E

Callsign

C4UK2

Type of Vessel

None

Nationality

Cyprus

Nav Status

Moored

Destination

IN'CHON

ETA

None

COG

187°

SOG

0.0kt

Heading

0°

Rate of Turn


0.0 degrees/minute

CPA

3.6nm


TCPA

Dimensions

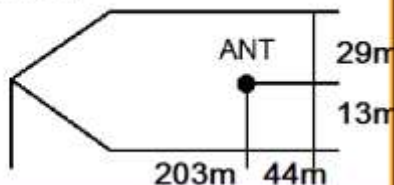

1.2.2. Goto

Choose the AIS target and press **GOTO**.

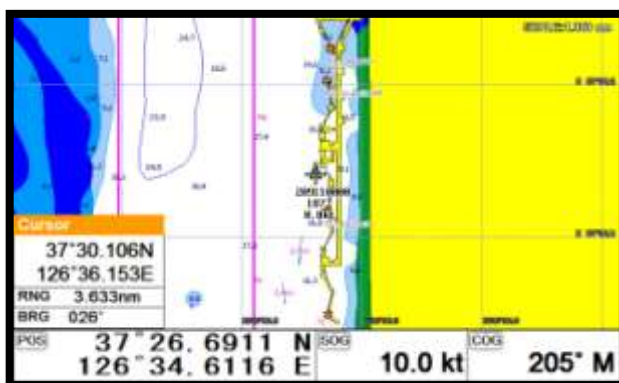

1.2.3. Sort


Press **MENU** to choose how to sort on (Fig.2.4).

AIS LIST				PAGE 1/2
Name	MMSI	Range	BRG	
_____	256076000	4.4nm	30°	
_____	440400150	6.0nm	30°	
_____	440003450	4.4nm	18°	
_____	356380000	4.3nm	30°	
_____	440101050	6.0nm	18°	
VICTOR KONETSKY	209110000	5.8nm	19°	
_____	440002300	1.0nm	54°	
_____	357923000	3.8nm	30°	
Sort by: [MENU]-Vessel Name [GOTO]-MMSI Sort [PAGE]-Range Sort [ACTIVE]-Brg Sort				

1.3. Display radius

Displays range rings centered on your current position.

(☞ The default setting is OFF.)

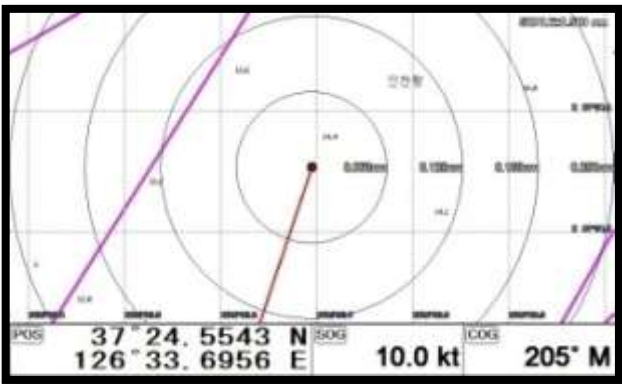

1.4. AIS target size

Choose the size of AIS target.

(☞ The default setting is Large.)

1.5. Display vessels by Color

Different types of AIS transmissions can be selected to display different colors of icons on the chart display.

1.6. Display vessels by Type

Different types of AIS transmissions can be selected to display different types of icons on the chart display.

2. Filter AIS types

This function allows you to turn on or off reception from different types of AIS transmissions, for instance if you only wanted to view Class B vessels on the chart display then select Class B On and all the others Off.

3. Alarm

3.1. CPA Alarm

The CPA alarm is the closest approach alarm, this allows you to set a distance when the alarm will sound if a vessel comes within that distance .

( The default setting is OFF.)

3.2. CPA Range

The values allowed are from 0.1nm to 10nm.

( The default setting is OFF.)

3.3. TCPA Alarm

The TCPA alarm is the time that a vessel will take to be in the same position as you currently are.

( The default setting is OFF.)

3.4. TCPA Limit

The values allowed are from 1 to 60 min.

( The default setting is 1 min.)

3.5. Radius Alarm

When any AIS target breaks into the radius, alarming.

3.6. Radius

The values allowed are from 0.1nm to 10nm.

( The default setting is OFF.)

3.7. Ignore Vessels if Speed Less

If you want the alarms to ignore vessels that are travelling at less than a particular speed then switch ON.

3.8. Speed less than

The values allowed are from 0.1kt to 9.9kt.

4. Setup AIS outs etc

4.1. Mark vessels as lost after

Setting the time of "Lost target".

( The default setting is 7min.)

4.2. Remove lost vessels after

If the updating AIS target is unavailable in the set time, erasing the AIS target on the screen..

( The default setting is 10min.)

4.3. AIS Status Bar

Setting up shown/hide AIS status bar on the screen.

( The default setting is on.)

4.4. Own Vessel target

It is available to setup the own vessel's AIS target display on the screen.

( The default setting is On.)

5. Others

5.1. Cursor Box info

When you move the cursor in chart mode over an AIS target a box appears showing details of that vessel.

5.2. Messages List

This window displays lists of specific AIS messages, such as Safety Messages that the unit has received. Scrolling down the list and highlighting a message allows you to see the contents by pressing the [ENTER] key. Whilst in the main list pressing the [MENU] key when a message is highlighted will erase that message, pressing the [▶] [◀] keys will allow you to view any other pages of messages.

★ AIS SART Messages

If an AIS SART message is received it will immediately be displayed on whatever screen you are viewing. If the “Status” shows “Test” then no further action is required as it is just a test transmission. If the “Status” shows “Active” it will also show the MMSI, Name and position, the SART icon should now be displayed on your chart screen at that location. Monitor your VHF radio on Channel 16 and establish whether any other station has received this SART message, if not take the appropriate action.

5.3. Fishing net

5.3.1. Fishing net

Display the programmed Fishing net AIS target.

( The default setting is Off.)

5.3.2. Select name

Program the name of Fishing Net

5.3.3. Alarm

The alarm goes off when no Fishing net AIS target is in setting range.

( The default setting is Off.)

5.3.4. Alarm Radius

Setup the Fishing net alarm range.

( The default setting is 0.05nm.)

5.4. Popup Window

When the cursor is on the AIS target, AIS information window activates automatically.

( The default setting is on.)

5.5. Silence Mode

Setting up on/off AIS transmits.

( The default setting is off.)

5.6. Test View

Showing the text message of SART Message.

( The default setting is Off.)

6. #Program transponder

Inputting the vessel data.

Press [ENTER] and input vessel data in (Fig.2.5). Press AIS to store.

Program Transponder

Name ①

MMSI ②

000000000

Type of Vessel ④

00 :

Dimensions ⑤

ANT

00m

00m

000m

000m

[ARROW]=Move [ENTER]=Select/Input

END=Cancel/Exit

(Fig.2.5)

①	Name	Name of the vessel
②	MMSI	Inputting the MMSI. (*Inputting the MMSI is available only once)
③	Call Sign	Inputting "Call sign".
④	Type of Vessel	Inputting the vessel type. (*Refer "Type of Vessel")
⑤	Dimensions	Inputting the vessel size.

Chartplotter getting started

1. GOTO

Setting GOTO with creating a route at the same time.

Move the cursor to the position where you want to go and press [ENTER].

(*While navigating, WPT can be added in the route)

1.1. Exit/Store

If you want to exit, remove the cursor and press [GOTO]. The window to store or not shows up.

Choose one of them and you will exit.

(*If you have one WPT in the route, the WPT will be stored. If you have more than two, all of WPT and the route will be stored together)

2. WPT

2.1. List

► [MENU]->Userdata->WPT->List

Editing, creating, erasing and navigating are available on the WPT list.

WPT LIST

Page 1 ①

Selected(blue color)

00001

00002

00003

WPT Name ②

Symbol ③

Color ④

00001

+

Latitude/Longitude ⑤

37°27.6180 N

126°34.8920 E

⑥ Depth

⑦ BRG

⑧ RNG

0m

14°

1nm

Date & Time ⑨

12. 01. 2009 AM 02:33


[ENTER]=Edit [+]=Add [-]=Erase [MENU]=Sort

[GOTO]=Goto [PAGE]=All Erase [◀][▶]=Move

①	List	Showing all of the stored WPT.
②	Name	Name of the WPT.
③	Symbol	Symbol of the WPT.
④	Color	Color of the WPT.
⑤	Latitude/Longitude	LAT/LOT of the WPT.
⑥	Depth	Depth of the WPT.
⑦	Bearing	Bearing between the WPT and the present position.
⑧	Range	Distance between the WPT and the present position.
⑨	Date & Time	Date and time of the WPT when stored

2.2. Setting the WPT symbol

► [MENU]->Userdata->WPT->WPT Symbol

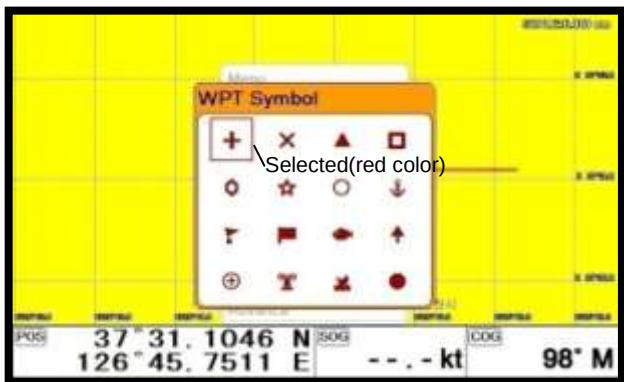


Choose the symbol and press [ENTER].

The chosen symbol will show when inputting WPT.

2.3. Setting WPT Color

► [MENU]->Userdata->WPT->WPT Color

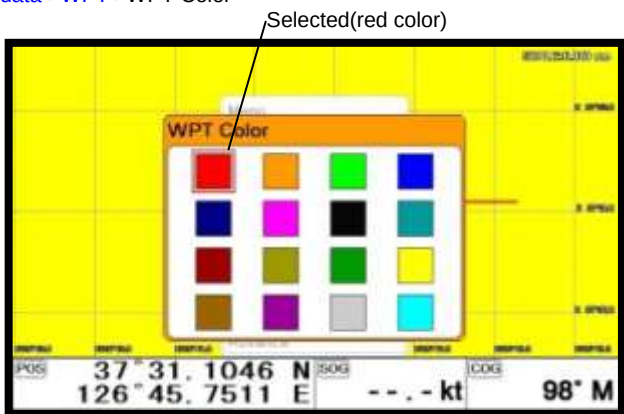

Choose the color and press [ENTER].

The chosen color will show when inputting WPT.

2.4. Creating

2.4.1. Creating on the list

► [MENU]->Userdata->WPT->List->[+]

Adding WPT with pressing .

(*When adding, LAT/LOT show the present position and current symbol/color show for the WPT)

2.4.1. Inputting on the chart

Call the cursor and move the position where you want, and press WPT .

(*The current symbol/color show for the WPT)



2.5. Erasing


2.5.1. Erasing on the list

► [MENU]->Userdata->WPT->List->[-]

Choose the WPT you want to erase and press - .

2.5.2. Erasing on the chart

Call the cursor and put it on the WPT, and press [ENTER].

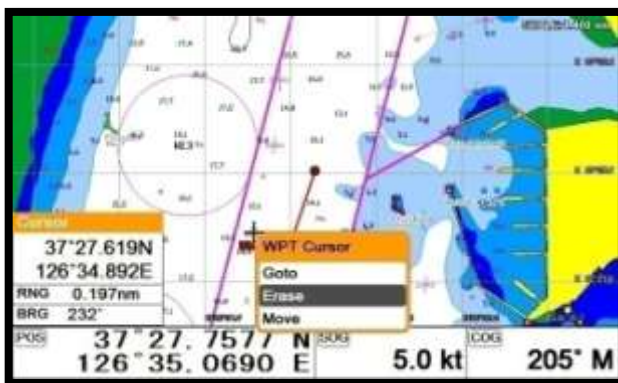

2.6 Erasing all of WPT

► [MENU]->Userdata->WPT->List->[TRACK]

On the WPT list, press **TRACK** .

2.7. Moving the WPT

1. Call the cursor and move it on the WPT, and press [ENTER].

2. Choose "Move".



3. Move the WPT to the position where you want to move, and press [ENTER].

2.8. Navigating


2.8.1. Navigating on the list

► [MENU]->Userdata->WPT->List->[FUNC]

Choose the WPT on the list and press **FUNC** .

2.8.2. Navigating on the chart

Call the cursor and move it on the WPT, and press [ENTER]. Choose "FUNC" to start.

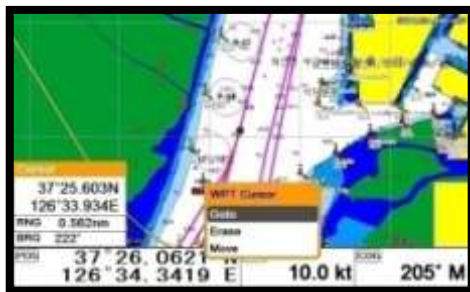

2.9. Sorting

► [MENU]->Userdata->WPT->List->[MENU]

Sorting the order of WPT on the list.

The screenshot shows a handheld device screen with an orange header bar labeled "WPT LIST". Below the header, the screen is divided into several sections. On the left, under "Page 1", is a list of waypoints with IDs 00001, 00002, and 00003. The first entry, 00001, is highlighted in blue. To the right of this list are fields for Latitude/Longitude, showing "37° 27. 6180 N" and "126° 34. 8920 E". Below these are fields for Depth (0m), BRG (235°), and RNG (0nm). At the bottom left, there are fields for WPT Name (00001), Symbol (+), and Color (red square). To the right of these is a "Date & Time" field showing "12. 01. 2009 AM 02:33". At the very bottom, a small orange bar contains the text "Sort by [MENU]-Name [+]-Recent [-]-Old" and "WPT ID [-]Symbol [PAGE]-Color".

Page 1	Latitude/Longitude
00001	37° 27. 6180 N
00002	126° 34. 8920 E
00003	

Depth	BRG	RNG
0m	235°	0nm

WPT Name	Symbol	Color	Date & Time
00001	+	Red	12. 01. 2009 AM 02:33

Sort by [MENU]-Name [+]-Recent [-]-Old
WPT ID [-]Symbol [PAGE]-Color

2.10. Editing

► [MENU]->Userdata->WPT->List

Editing the WPT on the list.

The screenshot shows the 'WPT LIST' screen with an orange header. Below the header, 'Page 1' is displayed. A list of waypoints is shown with '00001' selected (highlighted in blue). To the right of the list, the 'Latitude/Longitude' is displayed as '37° 27. 6180 N' and '126° 34. 8920 E'. Below this, three boxes show 'Depth' (0m), 'BRG' (15°), and 'RNG' (1nm). At the bottom, there are fields for 'WPT Name' (00001, highlighted in green), 'Symbol' (+), and 'Color' (red square). To the right of these is a 'Date & Time' field showing '12. 01. 2009 AM 02:33'. At the very bottom, a legend indicates: '[<][>][▲][▼]=Move [ENTER]=Select / Input' and '[PWR]=Cancel / Exit'.

WPT Name	Symbol	Color
00001	+	Red

Edit Selected(green color)

1. Choose the WPT as the blue and press [ENTER].
2. Choose the item as the green and you may begin to edit.
3. After finishing, press **POWER** to exit.

3. Route

3.1. List

► [MENU]->Userdata->Route->List

ROUTE LIST

Page 1 ①

ROUTE001

② Route Name

ROUTE001

③ Number of WPT

3

④ Total distance

2.1nm

⑤ Display

Shown

Date & Time ⑥

2009.12.01 AM 02:34

Start WPT ⑦

End WPT ⑧

Name:
00004
LAT/LON
37°27.2040 N
126°34.3670 E

Name:
00006
LAT/LON
37°28.3540 N
126°35.5650 E

[ENTER]=Edit [+]=Add [-]=Erase [MENU]=Sort
[GOTO]=Goto [PAGE]=Detail [◀] [▶]=Move

①	List	Showing the stored WPT
②	Name	Name of the route
③	Number of WPT	Number of WPT in the route
④	Total distance	Total distance of the route
⑤	Display	Shown/Hidden the route on the chart
⑥	Date & Time	Date and time of the WPT when stored
⑦	Start WPT	The beginning of the route
⑧	End WPT	The end of the route

3.2. Route detail

► [MENU]->Userdata->Route->List->[\[TRACK\]](#)

ROUTE DETAIL

Page 1 ①

00004

00005

00006

Latitude/Longitude ⑤

37°27.2040 N

126°34.3670 E

Depth ⑥

BRG ⑦

RNG ⑧

27m

227°

0nm

WPT Name ②

Symbol ③

Color ④

Date & Time ⑨

00004





2009.12.01 AM 02:34

[ENTER]=Edit [MENU]=Add Saved WPT [+]=Add New WPT

[-]=Erase [GOTO]=Find (◀|▶)=Move

①	List	Showing the stored WPT
②	Name	Name of the WPT
③	Symbol	Symbol of the WPT
④	Color	Color of the WPT
⑤	Latitude/Longitude	LAT/LOT of the WPT
⑥	Depth	Depth of the WPT
⑦	Bearing	Bearing between the WPT and the present position
⑧	Range	Distance between the WPT and the present position
⑨	Date & Time	Date and time of the WPT when stored

3.3. Creating

Two ways to create route

The first uses **GOTO** and the second is “Creating new route” on the list.

3.3.1. Creating new route on the list

► MENU->Userdata->Route->List

Press  on the list to create a route.

ROUTE LIST

Page 1

ROUTE001

Selected(Blue color)

Total distance

2.1nm

Display

Shown

Date & Time

2009.12.01 AM 02:34

Start WPT

End WPT

Name: 00004

Name: 00006

LAT/LON

LAT/LON

37°27.2040 N

37°28.3540 N

126°34.3670 E

126°35.5650 E

Route Name

Number of WPT

ROUTE001


3

ENTER)=Edit (+)=Add (-)=Erase (MENU)=Sort
GOTO)=Goto (PAGE)=Detail (←)=Move

3.4. Edit

► MENU->Userdata->Route->List

Choose the route on the list to edit.

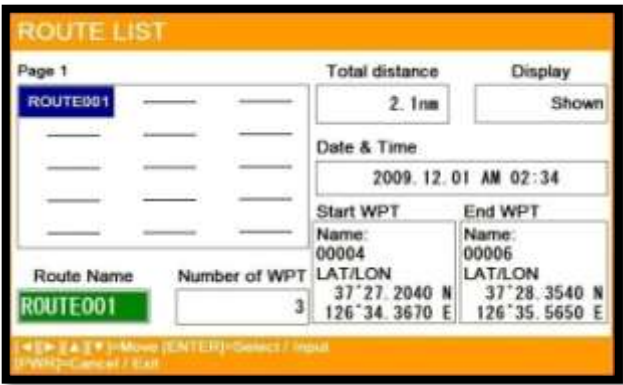

3.5. Detail edit

► [MENU]->Userdata->Route->List->[TRACK]

Choose the route on the list and press **TRACK** . The window of Route detail shows.

3.5.1. Adding WPT

Two ways to add WPT

3.5.1.1. Adding the stored WPT

► [MENU]->Userdata->Route->List->[PAGE]->[MENU]



(Fig.3.1)

Press  on the Route detail and you may add the stored WPT as (Fig.2.1).

3.5.2.1. Adding new WPT

Press  on Rout detail and you may add new WPT.

3.5.3. Erasing WPT

Choose the WPT and press  .

3.6. Navigating

► [MENU]->Userdata->Route->List->[FUNC]

Choose the route on Route list and press  .

3.7. Erasing

Choose the route and press  .

4. Track

The maximum point is 50,000.

Two ways to manage the track. The first is to manage the total 50,000 points by colors. The second is to divide 50,000 points in five rooms, and you can store 10,000 points for the maximum in each room.

Tracking has two types, "by time and by distance".

4.1. Track on/off

► [TRACK]

Shown/Hidden the track.

4.2. Choosing the track

4.2.1. By time

► [MENU]->Userdata->Track->Track Setup->Record Setup->Time

Tracking by the set time.

4.2.2. Setting the time interval

► [MENU]->Userdata->Track->Track Setup->Time Interval

Setting the time interval.

4.2.3. By distance

► [MENU]->Userdata->Track->Track Setup->Record Setup->Distance

Tracking by the set distance.

4.2.4. Setting the distance interval

► [MENU]->Userdata->Track->Track Setup->DIST Interval

Setting the distance interval.


4.3. Setting the thickness

► [MENU]->Userdata->Track->Track Setup->Thickness

Setting the track thickness.

4.4. Track Color

► [MENU]-> [Userdata](#)->[Track](#)->Track Color

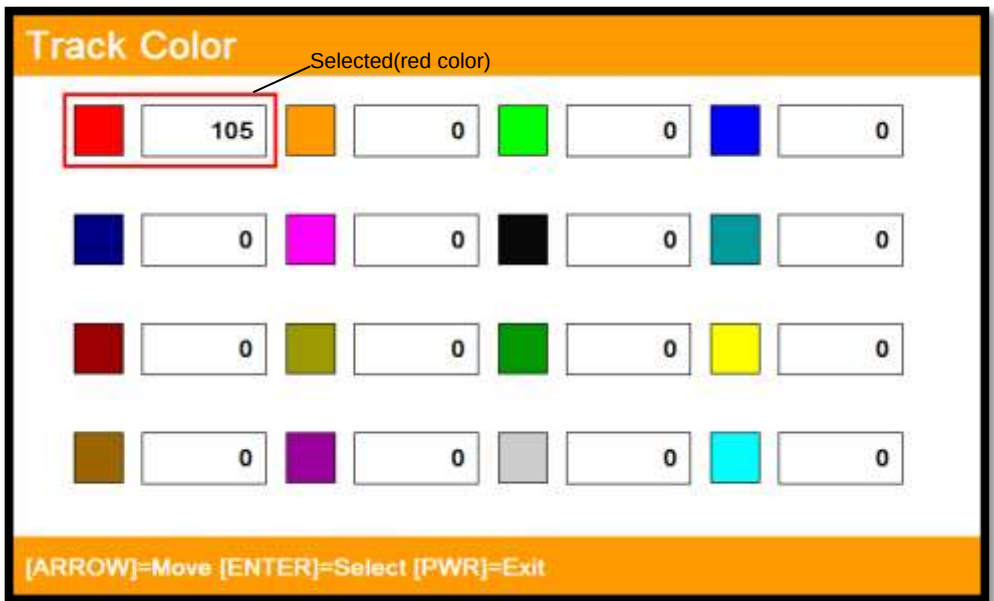

Choose the color and press [ENTER].

(* The number next the color shows the number point of the track color)

4.5. Erasing

► [MENU]->Userdata->Track->Erase

Choose the color and press [ENTER].

(*The number next the color shows the number point of the track color.)

4.6. Erasing all of track


► [MENU]->Userdata->Track->Erase

Press  .

5. Measuring the distance and bearing

Measuring two points, "A" and "B".

1. Call the cursor and move it on the point, "A".
2. Move the cursor on the point, "B".
3. The cursor windows provides the distance and bearing between A and B.
4. Press **POWER** to exit.

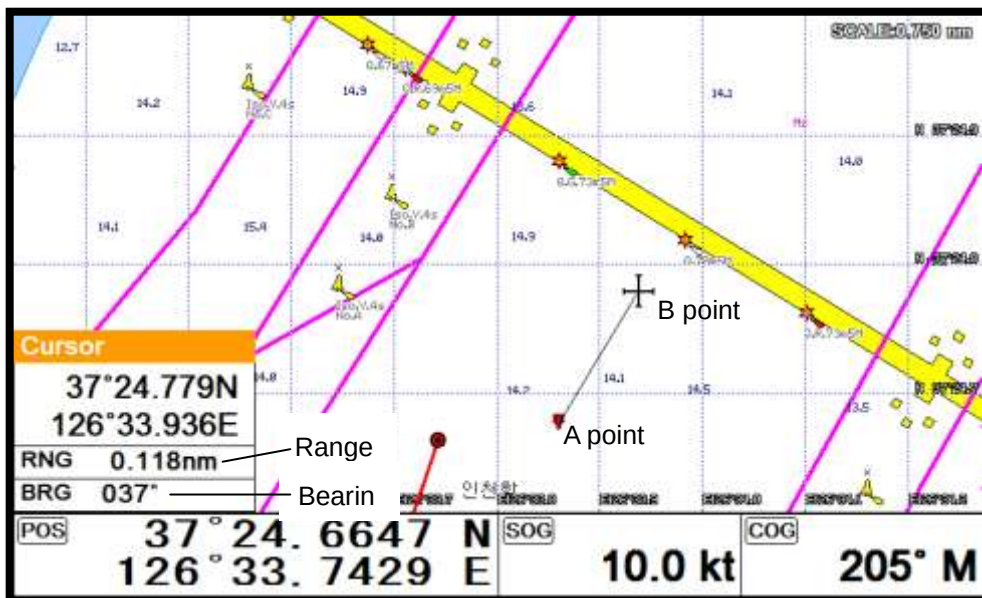

|| Chartplotter operation

1. Map Orientation

► [MENU]->Advance->Map Setup->Map Orientation

1.1. True Motion

► [MENU]->Advance->Map Setup->Map Orientation->True motion

The True Motion is in the way the vessel position is presented. In True Motion mode, the vessel position symbol moves over the map while the map remains stationary.

(* It is not available to operate on Course up and Head up.)

1.2. North Up/South Up/East Up/West Up

► [MENU]->Advance->Map Setup->Map Orientation->Up mode

They setting the vessel present position remains fixed in the center of the Main Screen while the map moves under it.

1.3. Course Up

► [MENU]->Advance->Map Setup->Map Orientation->Up mode

The Course Up mode screen orientation is determined by whether or not navigation is in progress. During navigation vessel present position is in the center of the Screen and the course line to the destination is straight up. As your present position changes, the map moves under the stationary vessel symbol.

(*If navigation is stopped, the Main Screen appears as Head up.)

1.4. Head Up

► [MENU]->Advance->Map Setup->Map Orientation->Up mode

For Head Up mode, vessel present position is fixed in the center of the Main Screen and vessel heading is upward. As your present position changes, the map moves under the vessel symbol.

2. Map setup

► [MENU]->Advance->Map Setup

2.1. Map orientation

2.1.1. True motion

You can select "True motion"

( The default setting is OFF.)

2.1.2. Up mode

You can select "Map Orientation"

( The default setting is North Up.)

2.2. UserData Display

Setting up shown/hide the user data on the display.

2.3. INFO Display

Setting up shown/hide common item between the HY-MAP on the display.

2.4. Map scale

Setting up the map scale on the display.

2.5. Palette

It is possible to the palette used to enhance the visibility of the screen depending on the surround light condition. The possible choices are listed in the table below:

2.5.1. Normal

It set the maps are displayed in ordered to use colors as similar as possible to the ones used in the original paper charts.

2.5.2. Sunlight

It is designed to enhance the visibility of the screen when HIS 54/55 series is exposed to the sunlight.

The maps are much brighter than in the other displays.

2.6. HY-Map

2.6.1. Depth Line

Setting up 2m,5m,10m,20m,50m of the depth line on the HY-MAP.

2.6.2. Rock

Setting up the Rock on the HY-MAP

( The default setting is shown.)

2.6.3. Fishing Banks

Setting up the Fishing Banks on the HY-MAP.

( The default setting is shown.)

2.6.4. Land Color

Select the land color as you want.

( The default setting is yellow.)

2.6.5. Lighthouse Info

Setting up the Lighthouse on the HY-MAP.

( The default setting is shown.)

2.6.6. Screen Magnification

Setting up the Screen Magnification on the HY-MAP.

(*MAX Magnification [ON = 0.05nm, OFF = 0.2nm])

3. Vessel

3.1. Vessel Icon Size

The size of the present position is adjustable from 0 to 9. The biggest size is '0'.

( The default setting is 9.)

3.2. Heading Line

The length of the heading line is adjustable from 50 until 300. The bigger number, the longer line. The heading line is used in modes of the true motion and the north up.

( The default setting is 270.)

3.3. Vessel style (Circle/Arrow/Vessel)

Select the vessel symbol among Circle, Arrow and vessel.

( The default setting is circle.)

3.4. Orient. Resolution

Sets you preferred Rolling Road Scale.

( The default setting is 0.)

4. Alarm

4.1. Navigation

4.1.1. Arrival Alarm:

When you approach into the waypoint range, it gives you a notice with alarm.

( The default setting is OFF.)

4.1.2. Arrival Radius:

It is to adjust the range of arrival from your waypoint. If you have a route, it changes to the next waypoint automatically.

( The default setting is 0.05nm.)

4.1.3. XTE Alarm:

If you are out of the course, it gives you a notice with alarm.

( The default setting is OFF.)

4.1.4. XTE Range

It is to adjust the range of the off course.

( The default setting is 0.25nm.)

4.2. Anchor

4.2.1. Anchor Alarm:

It is necessary when your vessel anchors.

( The default setting is OFF.)

4.2.2. Anchor Radius:

If your vessel is out of the range of the anchor, it gives you notice with alarm.

( The default setting is 0.05nm.)

4.3. Interval

4.3.1. Interval Alarm:

It alarms every time you set.

( The default setting is OFF.)

4.3.2. Interval Time

The time is available from one minute until sixty minutes.

( The default setting is 3 min.)

General operation

1.GPS

It is available to control and confirm information in GPS receiver.

1.1. Datum

It shows GPS Datum. WGS-84, which is the worldwide standard is only available.

( The default setting is WGS-84.)

1.2. Fix Correction

1.2.1.LAT Modification

There could be a receiving signal error from satellites. If it is on the latitude, modify in the latitude modification.

1.2.2. LON Modification

There could be a receiving signal error from satellites. If it is on the longitude, modify in the longitude modification.

1.3. COG filtering

It sets time by second for average bearing. It is a special function for a fishing boat.

(※ Although you set a time to the menu, it is unavailable if the menu, No. 5(Smoothing ser is off.)

( The default setting is incorrect every the country.)

1.4. SOG filtering

It sets time by second for average speed. It is a special function for a fishing boat.

(※ Although you set a time to the menu, it is unavailable if the menu, No. 5(Smoothing ser is off.)

( The default setting is incorrect every the country.)

1.5. LAT/LON Unit

It is to select the number of the unit for Lat/Lon.

( The default setting is 4 unit.)

1.6. Receiving Port

It is to select Inter receiver Internal, External and AIS.

( The default setting is AIS.)

2. Setup

It is available to set the menu or units for user's visual confidence.

2.1. Unit

2.1.1. DIST/Speed

Select desired unit of measure for distance and speed. Choose from: nautical mile/knots (nm/kt), kilometer/kilometers per hour(km/kmh), yard/knot(yd/kt).

cf) 1nm = 1.852km, 1kt /h= 1.852km/h, less than 1nm display in yard and over 1nm display in mile

( The default setting is Nm/Kt.)

2.1.2. Depth

Select desired unit of measure for depth of water. Choose from: meter(M), foot(ft), fathom(fm), Italian Fathom(lfm), Japanese fathom(Jfm).

cf) 1m = 3.281ft = 0.549fm = 0.609lfm = 0.660jfm

( The default setting is Meter.)

2.1.3. TEMP

Select desired unit of measure for temperature of water. Choose from: Celsius(°C), or Fahrenheit(°F).

cf) 1°C = +32°F

2.2. Compass

2.2.1. BRG

There is a difference degree where you are in the earth. This function is to modify the error from true and Magnetic.

( The default setting is Auto.)

2.2.2. Variation

There could be a difference between the magnetic compass and the GPS compass. An error depends upon your area.

2.3. Time & Date

2.3.1. Reference

Available to adjust the collect local time by the UTC time from the GPS.

( The default setting is incorrect every the country.)

2.3.2. Time Format

Sets you preferred time between 12 hour or 24 hour.

( The default setting is 12 hour.)

2.3.3. Date Format

Sets you preferred date among YY-MM-DD, MM-DD-YY or DD-MM-YY.

( The default setting is YY-MM-DD.)

2.3.4. Month format

Sets you preferred date between Character or Number.

2.3.5. Calendar setup

2.3.5.1. Week starts on

You can select the first day of week.

( The default setting is SUN.)

2.3.5.2. Color Saturday

You can setup the color of Saturday.

2.3.5.3. Color Sunday

You can setup the color of Sunday.

2.4. Input/Output

2.4.1. Output Sentences

The chartplotter allows customizing the NMEA-0183 sentence.

DESCRIPTIONS	CONTENTS OF DATA FIELD	DEFAULT
\$GPGGA	Global Positioning System Fix Data	ON
\$GPVTG	Course and Ground Speed	ON
\$GPZDA	Time and Date	OFF
\$GPRMB	Recommended minimum navigation information	OFF
\$GPRMC	Recommended Minimum Specific GPS/TRANSIT DATA	OFF
\$GPAPB	Heading/track controller (Autopilot) sentence B	ON

\$GPXTE	Cross-track error, measured	OFF
\$GPBOD	Bearing, origin to destination	OFF
\$GPBWC	Bearing and distance to waypoint	ON
\$SYPLT	Samyoung autopilot	OFF

2.4.2. Transmit

Available to adjust transmit speed of input/output in each ports.

2.4.3. Output Version

Available to adjust Output Version.

2.5. Buzzer

It is can be buzzer on/off.

( The default setting is on.)

2.6. Customizing

2.6.1. Databar

2.6.1.1. Display

Setting up shown/hide the databar on the display.

( The default setting is Shown.)

2.6.1.2. Position

Setting up up/down the position of databar on the display.

( The default setting is Down.)

2.6.1.3. Edit

It customizes the data bar information.

2.6.1.4 Mode

It is available to set up the data bar.

- Customizing : It is selectable and modifiable the data bar by user.

- Fix mode : It is fixed data bar by default. It is not available selectable and modifiable the data bar by user.

( The default is User mode.)

2.6.2. Navigation Data

2.6.2.1. Type

It is a select the navigation data type.

( The default setting is Type1.)

2.6.2.2. Edit

It customizes the Navigation data section except activated the echo sounder section.

2.6.3. Menu

2.6.3.1. Color

Changing the menu color.

( The default setting is orange.)

2.6.4. INFO Window

2.6.4.1. WPT

While navigating, shown/hidden "WPT information".

( The default setting is shown.)

2.6.4.2. Cursor

When the cursor is on the screen, shown/hidden the cursor window.

( The default setting is shown.)

2.6.4.3. Voltage

Setting up shown/hide voltage on chart

( The default setting is hidden.)

2.6.4.4. Position Setup

Choose the position of Information window.

( The default setting is Auto.)

2.6.5. Userdata

2.6.5.1. WPT

16 kinds of symbol and color. Choose the symbols and the colors.

2.6.5.1.1. Symbol Setup

In 16 kinds of the symbols, you can choose as many as you want, and those will show on the WPT symbol window.

2.6.5.1.2. Color Setup

In 16 kinds of the colors, you can choose as many as you want, and those will show on the WPT color window.

2.6.5.2. Track

2.6.5.2.1. Color Setup

In 16 kinds of the colors, you can choose as many as you want, and those will show on the track color window.

2.6.5.3. Total Distance Reset

Resetting "0" in Databar, Navigation Data page, Steering page, Highway page, GPS Status page.

2.6.6. Others

2.6.6.1. Alpha Blending

You can set the transparency of the background in databar and subscreen.

2.6.6.2. Page mode

It is a select the page mode.

- Standard: Choosing Page and customizing is available.
- Flip: Showing the chosen pages in order.

( The default setting is Standard.)

3. Maintenance

It is necessary to check the system or the version for maintenance and demonstrate HIS 54/55 series with the simulators

3.1. Version

3.1.1. Program Version

It contains ID and the program version, and it has important information for maintenance and upgrade.

3.1.2. OS Version

It contains the version of OS, which is necessary for maintenance and upgrade

3.1.3. MAP Version

It contains the version of the chart, the datum and the number, which is necessary for maintenance and upgrade

3.2. Simulator

It is necessary for an indoor demonstration. The simulations of GPS or AIS in the memory..

3.3. Language

Select the language.

3.4. Initialization

3.4.1. User Initialization

The stored setting is initialized in the user setting.

3.4.2. Setup Initialization

reset without deleting user data.

3.4.3. Factory Initialization

returning to the initial system from the releasing of factory.

(*All user data will be deleted)

3.5. Others

3.5.1. [FUNC]Key

Set the function frequently used for your convenience.

( The default setting is Page.)

[FUNC]KEY SETUP
1.Page
2.Active
3.Recording
4.Capture
5. MOB
6. GOTO

3.5.2 Save User Setting

Storing the user initialization for the default. The current is storing.

3.5.3. Calendar

It is available to check the solar/moon calendar and tide.

HIS-55A

General specification

- | | |
|---------------------------|------------------------------------|
| 1. Display Screen: | 5inch Color LCD with LED backlight |
| 2. Resolution: | WVAG (800 X 480 pixels) |
| 3. Power Supply: | DC 12V~36V(+/-10%) 5W |
| 4. Operating Temperature: | -15°C~+50°C |
| 5. Performance Standard: | IMO Resolution MSC.112(73) |
| 6. Option: | MicroSD, External GPS Antena |

GPS Receiver specification

- | | |
|------------------------------------|-------------|
| 1. GNSS Receiver Capabilities | |
| GPS | L1 C/A code |
| 2. Number of Channel: | 50 channels |
| 3. Horizontal Positioning Accuracy | |
| Autonomous | 2.5m |
| 4. Sensitivity | |
| Acquisition | -140 dBm |
| Tracking | -149 dBm |
| 5. Data Update Rate: | 1 second |

Chartplotter specification


- | | |
|---------------------|---|
| 1. Display Method: | Mercado Projection |
| 2. Display Mode: | True motion / N/S/E/W up / Course up / Head up |
| 3. Latitude Limits: | Between 85°N to 85°S |
| 4. Map Scale: | 0.05nm to 1500nm |
| 5. Map Datum: | WGS-84 |
| 6. Waypoint: | 10,000 points
*Total of 16 colors and 16 icons are selectable each point with name tag (8 alphanumeric characters) |
| 7. Track Point: | 50,000 points(2 types) |
| 8. Route: | Max capacity 100 Routes
*20 WPTs per each Route. Each with name tags (8 alphanumeric characters) |
| 9. Draw Point: | 1,000 points |
| 10. Area Name: | 1,000 points |
| 11. Chart Data: | HY-MAP(Built-in or External) |
| 12. Output Data: | NMEA-0183 |
| 13. Input Data: | NMEA-0183 |
| 14. Alarm: | Arrival, Anchor, XTE, Interval timer, User line |

AIS specification


- | | |
|-----------------------------|---|
| 1. Connector | VHF antenna(PI-259)
GPS antenna(BNC) |
| 2. Frequency | 156.025MHz ~ 162.025MHz
- Default channel 88B, AIS(162.025MHz)
- Default channel 87B, AIS(161.975MHz) |
| 3. Channel Spacing | 25KHz |
| 4. Frequency stability rate | ±10RPM(-20°C ~ +60°C)
- 69 - |

- | | |
|-------------------|--|
| 5. Data Rate | 25KHz GMSK (AIS, TX and RX) |
| 6. Sensitivity | 25KHz AFSK (DSC, RX only) |
| 7. Display stats | -107dBm(Message error rate: 20%) |
| 8. Compliant with | ON, TX, RX1, RX2 |
| 9. Output power | IEC62287-1 ClassB, ITU-RM.1371-1, IEC61162-1, EN-60945 |
| 10. Demodulation | 2W(33dBm ±1.5dB) |
| | GMSK |

Standard Equipment Configuration List

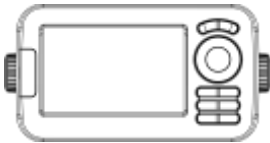


Display unit

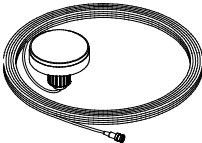


External GPS ANT




Manual

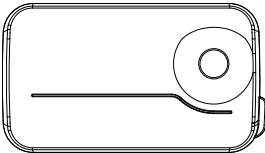

Protector

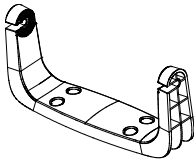


Mounting Bracket



Knobs




Fuse & Bolt

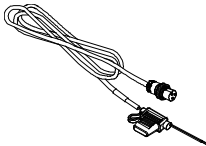


Power cable

Dimension

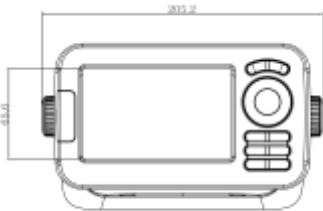

<FRONT>

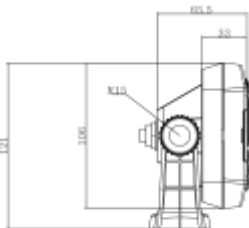

<LEFT>

HIS-54A

General specification

- | | |
|---------------------------|------------------------------------|
| 1. Display Screen: | 5inch Color LCD with LED backlight |
| 2. Resolution: | WVAG (800 X 480 pixels) |
| 3. Power Supply: | DC 12V~36V(+/-10%) 5W |
| 4. Operating Temperature: | -15°C~+50°C |
| 5. Performance Standard: | IMO Resolution MSC.112(73) |
| 6. Option: | MicroSD, External GPS Antena |

GPS Receiver specification

- | | |
|------------------------------------|-------------|
| 1. GNSS Receiver Capabilities | |
| GPS | L1 C/A code |
| 2. Number of Channel: | 50 channels |
| 3. Horizontal Positioning Accuracy | |
| Autonomous | 2.5m |
| 4. Sensitivity | |
| Acquisition | -140 dBm |
| Tracking | -149 dBm |
| 5. Data Update Rate: | 1 second |

Chartplotter specification


- | | |
|---------------------|---|
| 1. Display Method: | Mercado Projection |
| 2. Display Mode: | True motion / N/S/E/W up / Course up / Head up |
| 3. Latitude Limits: | Between 85°N to 85°S |
| 4. Map Scale: | 0.05nm to 1500nm |
| 5. Map Datum: | WGS-84 |
| 6. Waypoint: | 10,000 points
*Total of 16 colors and 16 icons are selectable each point with name tag (8 alphanumeric characters) |
| 7. Track Point: | 50,000 points(2 types) |
| 8. Route: | Max capacity 100 Routes
*20 WPTs per each Route. Each with name tags (8 alphanumeric characters) |
| 9. Draw Point: | 1,000 points |
| 10. Area Name: | 1,000 points |
| 11. Chart Data: | HY-MAP(Built-in or External) |
| 12. Output Data: | NMEA-0183 |
| 13. Input Data: | NMEA-0183 |
| 14. Alarm: | Arrival, Anchor, XTE, Interval timer, User line |

AIS specification


- | | |
|-----------------------------|---|
| 1. Connector | VHF antenna(PI-259)
GPS antenna(BNC) |
| 2. Frequency | 156.025MHz ~ 162.025MHz
- Default channel 88B, AIS(162.025MHz)
- Default channel 87B, AIS(161.975MHz) |
| 3. Channel Spacing | 25KHz |
| 4. Frequency stability rate | ±10RPM(-20°C ~ +60°C)
- 71 - |

- | | |
|-------------------|--|
| 5. Data Rate | 25KHz GMSK (AIS, TX and RX) |
| 6. Sensitivity | 25KHz AFSK (DSC, RX only) |
| 7. Display stats | -107dBm(Message error rate: 20%) |
| 8. Compliant with | ON, TX, RX1, RX2 |
| 9. Output power | IEC62287-1 ClassB, ITU-RM.1371-1, IEC61162-1, EN-60945 |
| 10. Demodulation | 2W(33dBm ±1.5dB) |
| | GMSK |

Standard Equipment Configuration List

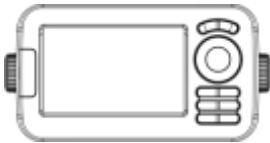


Display unit

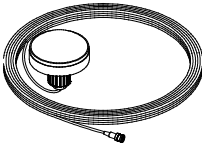


External GPS ANT




Manual

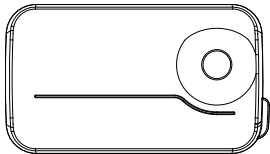

Protector

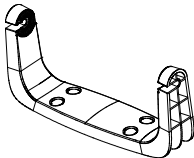


Mounting Bracket



Knobs




Fuse & Bolt

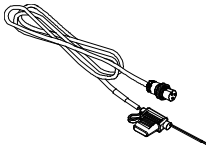


Power cable

Dimension

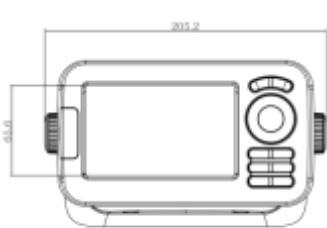

<FRONT>

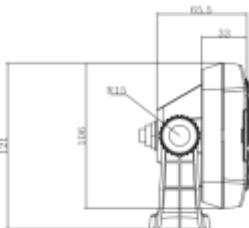

<LEFT>

Customizing items

POG	LAT/LOT of the present position. (Red: out of GPS service/Black: GPS on service/Blue: SBAS or DGPS on service)
SOG	(Speed Of Ground) Boat speed.
COG	(Course Of Ground) Boat direction.
DATE	Date of today.
TIME	Present time.
HDOP	Horizontal Dilution Of Precision.
PDOP	Position Dilution Of Precision.
W.POG	WPT Position Of Ground
W.NAME	(WPT Name) the present WPT of the destination
TOT TIME	(Total Time) Total using time
VOLTAGE	Present voltage. (unstable voltage shows in red)
TTG	(Time To Goal) Remaining time to the destination.
ETA	Estimated time of arrival.
XTE	Cross track error.
W.RNG	Distance from the present position to the WPT.
W.BRG	Bearing between the present position and the WPT.
W.INFO	The total number of WPT and shows the WPT symbol/color.
TRACK	The total number of track and shows the track color.
DATE&TIME	The current date and time.
C.POG	LAT/LOT of the cursor.
C.BRG	Bearing between the present position and the cursor.
C.RNG	Distance between the present position and the cursor.

I Type of Vessel

Number	Description
30	Fishing vessel
31	Vessels engaged in towing
32	Vessel engaged in towing, tow exceeds 250m
33	Vessel engaged in dredging or underwater operations
34	Vessel engaged in diving operations
35	Vessel engaged in military operations
36	Sailing
37	Pleasure craft
50	Pilot vessel
51	Search and Rescue vessel
52	Tugs
53	Port Tenders
54	Anti pollution vessel
55	Law enforcement vessel
58	Medical transport
60	Passenger ship
70	Cargo ship
80	Tanker ship

HY-MAP Icon

Icon	Description	Icon	Description
	Anchor berths		Beacon with color and topmark
	No Anchoring Area		Position of fog signal
	Pilot boarding place		Radar reflector
	Wreck showing any part of hull or superstructure at the level of Chart Datum.		Wreck, in over 200m or depth unknown, which is not considered dangerous to surface navigation
	Marine farm		Lighthouse
	Wreck, depth unknown, which is considered dangerous to surface navigation		Military restricted area into which entry is prohibited
	Radar transponder beacons		Yacht harbor, Marina
	Fishing prohibited		Lighted offshore platform
	Conical buoy, nun buoy, ogival buoy		Oil tanks
	Can buoy, cylindrical buoy		Wrecks
	Spherical buoy		Lights
	Pillar buoy		Barrel buoy, tun buoy
	Spar buoy, spindle buoy		Superbuoy. Superbuoys are very large buoys
	Tides		Port information(

|| Display Unit Installation

HIS 54/55 series brings expandable display technology to your bridge or navigation station. A careful installation will assure maximum benefit from HIS 54/55 series integrated features.

Display Unit Location

Select a location for your HIS 54/55 series display unit that provides easy viewing from all likely operator's positions. The display unit is designed to be mounted on either a console or from an overhead surface. The HIS 54/55 series display is also designed for flush mounting using six threaded holes on the rear panel. Locate the display in an area with protection from the elements and avoid direct sunlight on the viewing window. Also, consider access to the rear panel of the unit for connecting power and cables to the various remote sensors. The mounting surface must be flat and solid to support the unit and prevent vibration. There should be access to the inside of the surface to permit through bolt fastening for the mounting bracket.

Display Unit Installation

Temporarily install the mounting bracket on the Genesis display unit and place the unit at the selected location.




CAUTION

The HIS 54/55 series display unit is unstable when the mounting bracket is not secured. Hold the unit in place at all times.

Check the suitability of the location and make any adjustments. When all is satisfactory, use the holes in the mounting bracket as a guide and mark the holes locations on the mounting surface.

Drill a 1/4 in. diameter hole at each marked location. Mount the HIS 54/55 series display bracket using bolts through the mounting surface. Place large flat washers on the opposite side of the mounting surface from the bracket and then install lock washers and nuts. Tighten securely.

Install the display unit into the mounting bracket. Check alignment and operation of the pivots and security of the mounting. Make any adjustments necessary to prevent binding and assure even meshing of the pivot locking washers. It is advised to remove the display unit and store it in a safe place to prevent damage during the rest of the installation process.

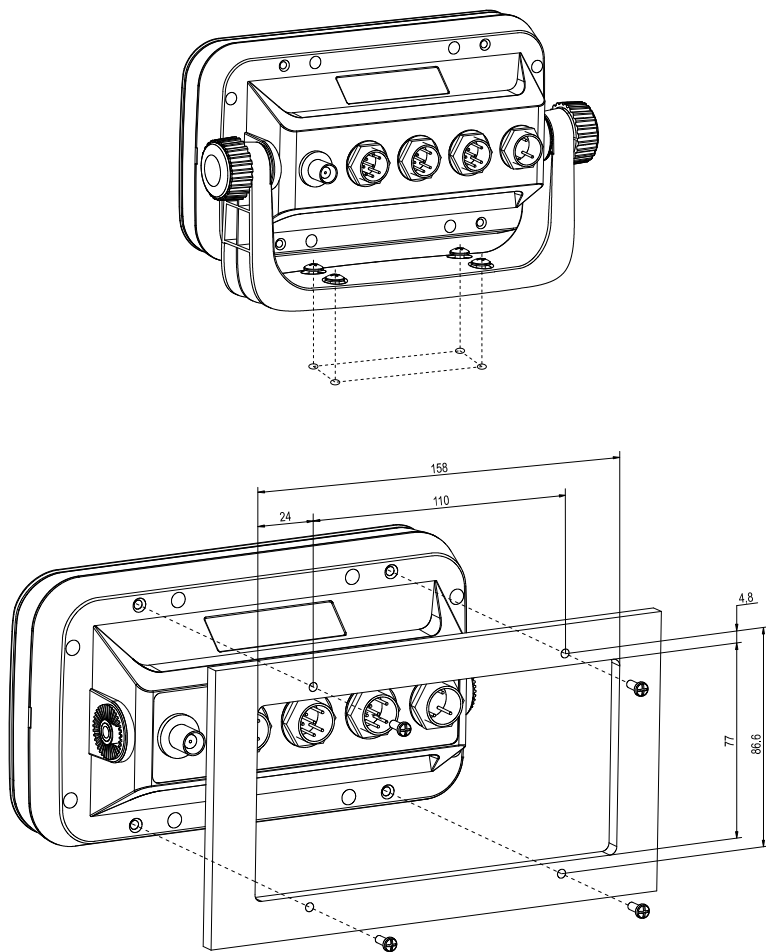

- Power Connection

Power is supplied to the HIS 54/55 series Charting System through a connector on the rear panel of the display unit.

Route the power cable from the HIS 54/55 series location to the ship's power distribution panel.

Connect the black wire to a battery negative (-) terminal of the power panel.

Connect the white wire to a fused battery positive (+) terminal of the power panel (12 to 24 Vdc nominal). If a fused terminal is not available, install an in-line fuse holder.

- Care and Cleaning

HIS 54/55 series is made to withstand marine elements but a little care ensures a trouble free life.

Accumulations of salt and sand, if not removed, will eventually mar the finish. No solvents or harsh cleaners should be used. The display unit may be wiped down with a damp cloth while avoiding the display window. Be careful not to scratch the display window surface. Gently remove any sand or other grit particles before cleaning the display window. The display window should be cleaned only with water and a clean soft cloth using very light pressure.

Reference

- NMEA

A standard developed by the National Marine Electronics Association and used by most marine equipment manufacturers for data communication is known as NMEA 0183 version 1.5 and version 2.0. NMEA0183 specifications offer many recognized sentences for exchanging data between many types of marine equipment.

The following technical information is provided for reference and is accurate to the best of our knowledge at the time of printing. Please refer to the appropriate NMEA specifications for details and the latest information.

The data sentences used by the HGP-660 are as follows.

Output sentences:

Descriptions	Contents of data field
\$GPGGA	Global Positioning System Fix Data
\$GPGLL	Geographic Position, Latitude/Longitude
\$GPGSA	GPS DOP and active satellites
\$GPGSV	GPS Satellites in View
\$GPVTG	Course and Ground Speed
\$GPZDA	Time & Date
\$GPRMC	Recommended Minimum Specific GPS/TRANSIT DATA
\$GPAPB	Heading/track controller (Autopilot) sentence B
\$GPXTE	Cross-track error, measured
\$GPBOD	Bearing, origin to destination
\$GPRMB	Recommended minimum navigation information

GPS Antenna Installation


For centuries, sailors have been searching for a reliable and precise method of travelling the world's waterways. From celestial navigation to the modern navigation techniques as Loran, Decca navigator, Omega or Transit Satnav, each system has had its problems with weather, range and reliability. Without doubt, the "Global Positioning System", or GPS for short, is the most significant advance in navigation: it gives the navigator a position 24 hours a day, 365 days a year in any weather condition. GPS is a satellite based navigation system which provides suitably equipped users with accurate position, velocity and time data. Originally the GPS, developed by the U.S. Department of Defense, was conceived for military purposes, but now it is used in a host of civilian applications. GPS navigation uses satellite signals to determine your position in relation to a set of satellites orbiting the earth. The GPS constellation of satellites continuously send radio signals, containing the precise position for each satellite back to earth. By knowing the position of 3 or 4 satellites and calculating various time differences between transmitted signals, the GPS receiver can determine its present position anywhere on earth, and thanks to continuous updates, calculate speed and course information.

The installation of the GPS ANT.

The GPS ANT must be installed at the highest area of the boat and the easiest place to catch the signal from the satellites. If there are obstacles around the GPS ANT, it isn't able to catch all signals. The receiving time would be longer or the receiving power would be weaker. Please, follow the instruction for your installation.

1. Keep from a metal.
2. Over 4m away from a MF/HF ANT, VHF or HF whip ANT.
3. Over 1.5m upper away from MF/HF ANT.
4. Over 1m away from a receiving ANT.
5. Don't put the GPS ANT into the range of radar's beam. (Range: 30° ~ 40°)

6. Over 1m away from the scanner of the radar.
7. Over 5m away from the ANT of the inmarsat.
8. Over 3m away from the ANT of the roof.
9. Over 2m away from the engine.
10. Over 0.5m away from the metal surface.

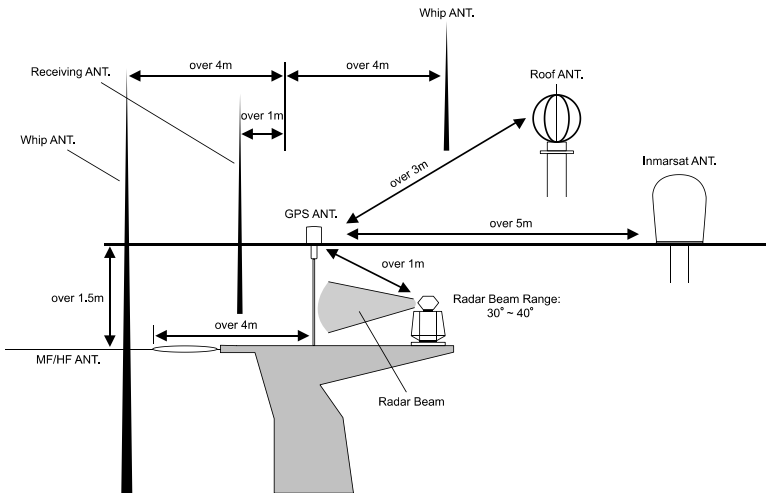

⊗ Warning: Not less than 0.5m away from the metal surface.

If the environment can't be satisfied from 1 to 10, have NO. 10 satisfied and consider the others.


II GPS

HOW GPS WORKS

Currently, the GPS constellation consists of 26 orbiting satellites (including 3 spares), but this number will increase in the future.

The GPS receiver computes an accurate position by calculating the distance to the GPS satellites that orbit the earth. Signals are required from 3 satellites for two dimensional (2D) position calculation whilst 4 satellites are required for three dimensional (3D) position calculation.

As mentioned earlier, GPS satellites are not geostationary, but they are orbiting the earth as illustrated on the following figure:

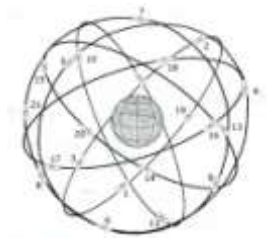

[The GPS constellation]

Note that position is repeatedly fixed through the following three steps while any 3 satellites are in line of sight.

The position calculation procedure is indicated in the following three steps:

1. GPS satellites continuously transmit their own precise orbital data and the GPS receiver computes their locations by receiving this data.
2. In this receiving process, the GPS receiver measures very accurate distances to the satellites, using the "Spread Spectrum Modulation" method. Excellence in GPS's position-fixing accuracy is mainly due to this technology.
3. When the satellite locations and their distances are known, the GPS receiver fixes its own position by triangulation:




[The GPS position calculation]

As illustrated in the previous figure, the position is calculated as the meeting point of three spheres which are drawn around the three satellites with diameters d_1 , d_2 and d_3 .





Position Fixing Accuracy: HDOP

The GPS fix accuracy is due to the locations of 3 satellites in the sky. High accuracy is obtainable when the satellites are widely scattered in the sky; on the contrary, accuracy is reduced when the satellites have gathered in a narrow space. In the following figure, in both cases it is possible to obtain the GPS fix, but in the left case the accuracy will be higher than the right:

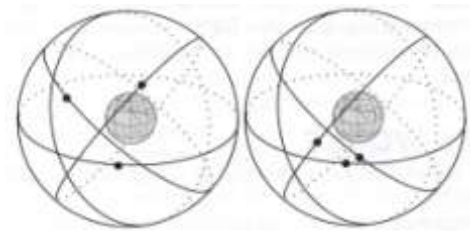


[HDOP]

The index for position-fixing accuracy is called HDOP (*"Horizontal Dilution Of Precision"*). The smaller the HDOP value, the more accurately the position can be fixed.

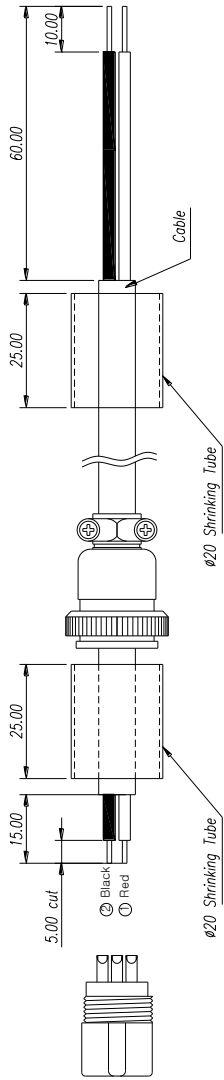

MATERIAL		DESCRIPTION	
SCALE	MODEL	Smart Series	Power Cable
NONE			
CHK. BY	DES. BY	DATE	DWG. NO.
PERN	Y.S.KIM	Y.S.KIM	S7-DC10303M
Y.S.KIM	Y.S.KIM	05/07/2012	


HAIYANO OLIX CO.,LTD

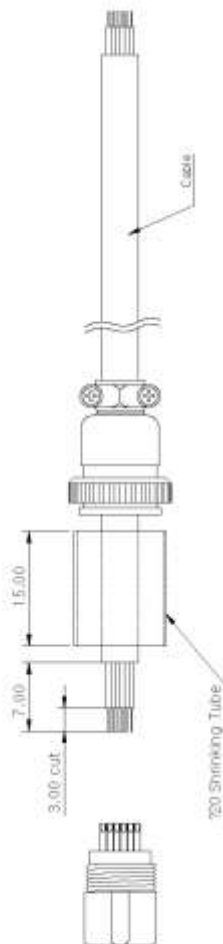


ref	description
1	060
2	TS+
3	062
4	06+
5	06-
6	06



MATERIAL	DESCRIPTION	DATA
SCALE: NONE	Model: S7-DC1010M	DATA: S7-DC1010M
PERN: 1.0.00	CHK. BY: DES. BY: DATE: 06.07.2012	
		HAIYANG OJUX CO., LTD.

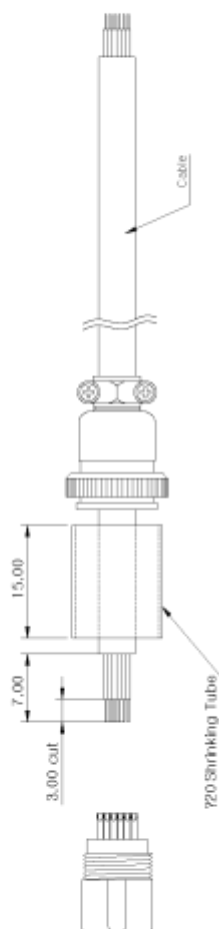


AIS Data Cable	
Pin #	Function
1	GN
2	NC
3	GN
4	Tr+
5	GN
6	NC



16-06P

MATERIAL		DESCRIPTION	
SCALE	MODEL	Smart Series	
SCALE	MODEL	Smart Series	
REFN	CHK. BY	DES. BY	DATE
Y.S.KIM	Y.S.KIM	Y.S.KIM	03.10.2014
		AIS Delta Cable	
		S7-DC10103A	
		HAIYANG POLIX CO., LTD	

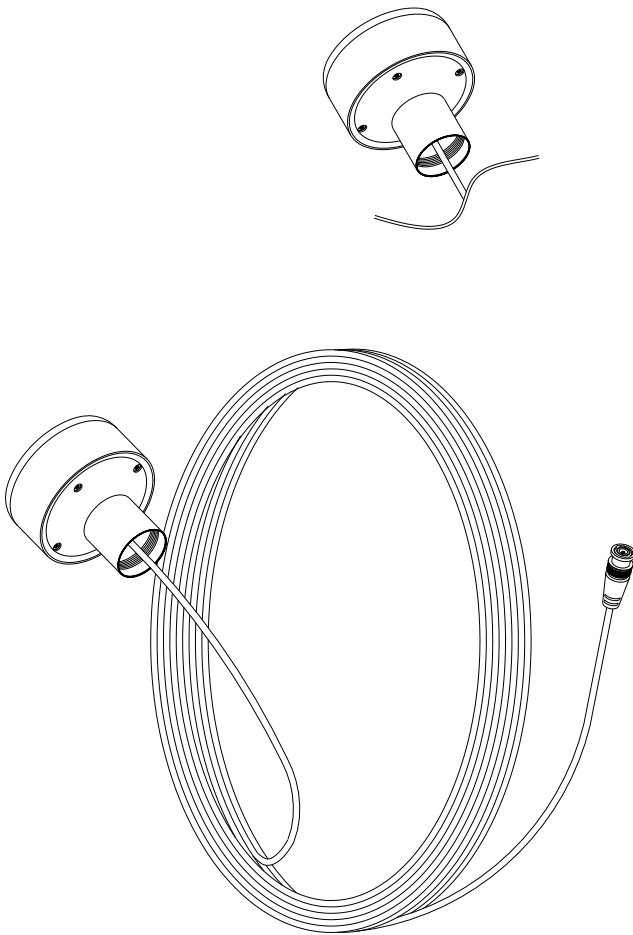

		MATERIAL		---		DESCRIPTION	
SCALE 1/1		MODEL		Smart Series		GPS ANT	
PERN KIM Y.S		CHK. BY KIM Y.S		DES. BY KIM Y.S		DATE 2012.05.07	
						DWG. NO. S7-PA80101	
							

Declaration of Warranty

Declares of under his sole responsibility that the produced Plotter with Fish Finder manufactured by

HAIYANG OLIX Co., LTD.

103-903 BucheonTechnopark 22 Samjakro

Bucheon Gyeonggi, Korea

TEL +82 32 4712 FAX +82 32 327 4713

Web-site: <http://www.haiyang.co.kr>

Guarantee for One Year

Haiyang Electronic Equipment Co., LTD warrants the produced equipment, Equipment for One (1) year for guarantee as bellows.

1. Main Unit: One (1) year guarantee after a user purchases the product within one (1) year
2. Accessories: One (1) year for consumed accessories (including TD) after a user purchases them.

Service in Charge

1. Over the term from the guarantee
2. Damage from user's carelessness (inundation, impact)
3. Intentional dismantle, modification or remodeling of the unit.
4. Unauthorized parts, components or accessories are used in the unit.
5. Installed or maintained by unauthorized person
6. Consumed parts and components (batteries, LCD, etc) run out.
7. Faults or damages from other reasons.

Model		Serial No.	
Date of Purchase		Customer Name	
Name of Dealer		Price	

※ Caution – Keep this warranty card with the receipt for fast and good service